

X20(c)BC1083

Data sheet
2.61 (August 2025)



Publishing information

B&R Industrial Automation GmbH

B&R Strasse 1

5142 Eggelsberg

Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

Disclaimer

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1247782280507-2.61

1 General information

1.1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

Document name	Title
MAX20	X20 System user's manual

1.2 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation and corrosive gases.

The modules' electronics are fully compatible with the corresponding X20 modules.



For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, method 4, exposure 21 days



1.2.1 Starting temperature

The starting temperature describes the minimum permissible ambient temperature in a voltage-free state at the time the coated module is switched on. This is permitted to be as low as -40°C. During operation, the conditions as specified in the technical data continue to apply.



Information:

It is important to absolutely ensure that there is no forced cooling by air currents in the closed control cabinet, e.g. due to the use of a fan or ventilation slots.

1.3 Order data


Order number	Short description	Figure
Expandable bus controllers		
X20BC1083	X20 bus controller, 1 POWERLINK interface, integrated 2-port hub, supports expansion with X20 interface modules, 2x RJ45, order bus base, power supply module and terminal block separately!	
X20cBC1083	X20 bus controller, coated, 1 POWERLINK interface, integrated 2-port hub, supports expansion with X20 interface modules, 2x RJ45, order bus base, power supply module and terminal block separately!	
Required accessories		
System modules for bus controllers		
X20PS9400	X20 power supply module, for bus controller and internal I/O power supply X2X Link power supply	
X20PS9402	X20 power supply module, for bus controller and internal I/O power supply, X2X Link supply, supply not galvanically isolated	
X20cPS9400	X20 power supply module, coated, for bus controller and internal I/O power supply X2X Link power supply	
System modules for expandable bus controllers		
X20BB81	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, with one expansion slot for X20 add-on module (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20BB82	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, with 2 expansion slots for 2 X20 add-on modules (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20cBB81	X20 bus base, coated, for X20 base module (BC, HB, etc.) and X20 power supply module, with one expansion slot for X20 add-on module (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20cBB82	X20 bus base, coated, for X20 base module (BC, HB, etc.) and X20 power supply module, with 2 expansion slots for 2 X20 add-on modules (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
Terminal blocks		
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed	
Optional accessories		
System modules for expandable bus controllers		
X20IF1091-1	X20 interface module, for expandable bus controller, 1 X2X Link master interface, electrically isolated, order 1x terminal block TB704 separately!	
X20 interface module communication		
X20IF1041-1	X20 interface module, for DTM configuration, 1 CANopen master interface, electrically isolated, order 1x terminal block TB2105 separately!	
X20IF1043-1	X20 interface module, for DTM configuration, 1 CANopen slave interface, electrically isolated, order 1x terminal block TB2105 separately!	
X20IF1051-1	X20 interface module, for DTM configuration, 1 DeviceNet scanner (master) interface, electrically isolated, order 1x terminal block TB2105 separately!	
X20IF1053-1	X20 interface module, for DTM configuration, 1 DeviceNet adapter (slave) interface, electrically isolated, order 1x terminal block TB2105 separately!	
X20IF1061-1	X20 interface module, for DTM configuration, 1 PROFIBUS DP V0/V1 master interface, electrically isolated	
X20IF1063-1	X20 interface module, for DTM configuration, 1 PROFIBUS DP V1 slave interface, electrically isolated	
X20IF10A1-1	X20 interface module, for DTM configuration, 1 ASi master interface, electrically isolated, order 1x terminal block TB704 separately!	
X20IF10D1-1	X20 interface module, for DTM configuration, 1 EtherNet/IP scanner (master) interface, electrically isolated	
X20IF10D3-1	X20 interface module, for DTM configuration, 1 EtherNet/IP adapter (slave) interface, electrically isolated	
X20IF10E1-1	X20 interface module, for DTM configuration, 1 PROFINET IO controller (master) interface, electrically isolated	
X20IF10E3-1	X20 interface module, for DTM configuration, 1 PROFINET IO device (slave) interface module, electrically isolated	
X20IF10G1-1	X20 interface module for DTM configuration, 1 EtherCAT master interface, electrically isolated	
X20IF10G3-1	X20 interface module for DTM configuration, 1 EtherCAT slave interface, electrically isolated	

Table 1: X20BC1083, X20cBC1083 - Order data

Order number	Short description	Figure
X20clF1041-1	X20 interface module, coated, for DTM configuration, 1 CANopen master interface, electrically isolated, order 1x terminal block TB2105 separately!	
X20clF1061-1	X20 interface module, coated, for DTM configuration, 1 PROFIBUS DP V0/V1 master interface, electrically isolated	
X20clF1063-1	X20 interface module, coated, for DTM configuration, 1 PROFIBUS DP V1 slave interface, electrically isolated	
X20clF10D3-1	X20 interface module, coated, for DTM configuration, 1 EtherNet/IP adapter (slave) interface, electrically isolated	
X20clF10E3-1	X20 interface module, coated, for DTM configuration, 1 PROFINET IO device (slave) interface module, electrically isolated	

Table 1: X20BC1083, X20cBC1083 - Order data

1.4 Module description

The bus controller makes it possible to connect X2X Link I/O nodes to POWERLINK. It is also possible to operate the X2X Link cycle synchronously 1:1 or synchronous to POWERLINK using a prescaler.

The bus modules expanded to the left allow connection of up to 2 interface modules in addition to the bus controller.

Functions:

- [POWERLINK](#)

POWERLINK

POWERLINK is a standard protocol for Fast Ethernet equipped with hard real-time characteristics.

2 Technical description

2.1 Technical data

Order number	X20BC1083	X20cBC1083
Short description		
Bus controller	POWERLINK (V1/V2) controlled node with up to 2 slots for interface modules	
General information		
B&R ID code	0x2268	0xE217
Status indicators	Module status, bus function	
Diagnostics		
Module status	Yes, using LED status indicator and software	
Bus function	Yes, using LED status indicator and software	
Support		
Dynamic node allocation (DNA)	Yes	
Power consumption		
Bus	2 W	
Additional power dissipation caused by actuators (resistive) [W]	-	
Certifications		
CE	Yes	
UKCA	Yes	
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÚ 09 ATEX 0083X	
UL	cULus E115267 Industrial control equipment	
HazLoc	cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5	
DNV	Temperature: B (0 to 55°C) Humidity: B (up to 100%) Vibration: B (4 g) EMC: B (bridge and open deck)	
CCS	Yes	-
LR	ENV1	
KR	Yes	
ABS	Yes	
BV	EC33B Temperature: 5 - 55°C Vibration: 4 g EMC: Bridge and open deck	
KC	Yes	-
Interfaces		
Fieldbus	POWERLINK (V1/V2) controlled node	
Type	Type 2 ¹⁾	
Variant	2x shielded RJ45 (hub)	
Line length	Max. 100 m between 2 stations (segment length)	
Transfer rate	100 Mbit/s	
Transfer		
Physical layer	100BASE-TX	
Half-duplex	Yes	
Full-duplex	No	
Autonegotiation	Yes	
Auto-MDI/MDIX	Yes	
Hub propagation delay	0.96 to 1 µs	
Min. cycle time ²⁾		
Fieldbus	200 µs	
X2X Link	200 µs	
Synchronization between bus systems possible	Yes	
Cyclic data		
Input data	Max. 1488 bytes	
Output data	Max. 1488 bytes	
Electrical properties		
Electrical isolation	POWERLINK isolated from bus and I/O	


Table 2: X20BC1083, X20cBC1083 - Technical data

Order number	X20BC1083		X20cBC1083
Operating conditions			
Mounting orientation			
Horizontal	Yes		
Vertical	Yes		
Installation elevation above sea level			
0 to 2000 m	No limitation		
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m		
Degree of protection per EN 60529	IP20		
Ambient conditions			
Temperature			
Operation			
Horizontal mounting orientation	-25 to 60°C		
Vertical mounting orientation	-25 to 50°C		
Derating	-		
Starting temperature	-		Yes, -40°C
Storage	-40 to 85°C		
Transport	-40 to 85°C		
Relative humidity			
Operation	5 to 95%, non-condensing		Up to 100%, condensing
Storage	5 to 95%, non-condensing		
Transport	5 to 95%, non-condensing		
Mechanical properties			
Note	Order 1x terminal block X20TB12 separately. Order 1x power supply module X20PS9400 or X20PS9402 separately. Order 1x bus base X20B-B81 or X20BB82 separately.		Order 1x terminal block X20TB12 separately. Order 1x power supply module X20cPS9400 separately. Order 1x bus base X20cB-B81 or X20cBB82 separately
Pitch ³⁾			
X20BB81	62.5 ^{+0.2} mm		
X20BB82	87.5 ^{+0.2} mm		

Table 2: X20BC1083, X20cBC1083 - Technical data


- 1) For additional information, see section "Communication / POWERLINK / General information / Hardware - CN" in Automation Help.
- 2) The minimum cycle time specifies how far the bus cycle can be reduced without communication errors occurring.
- 3) Pitch is based on the width of bus base X20BB81 or X20BB82. Up to 2 interface modules and 1 power supply module X20PS9400 or X20PS9402 are always required for the bus controller.

2.2 Operating and connection elements

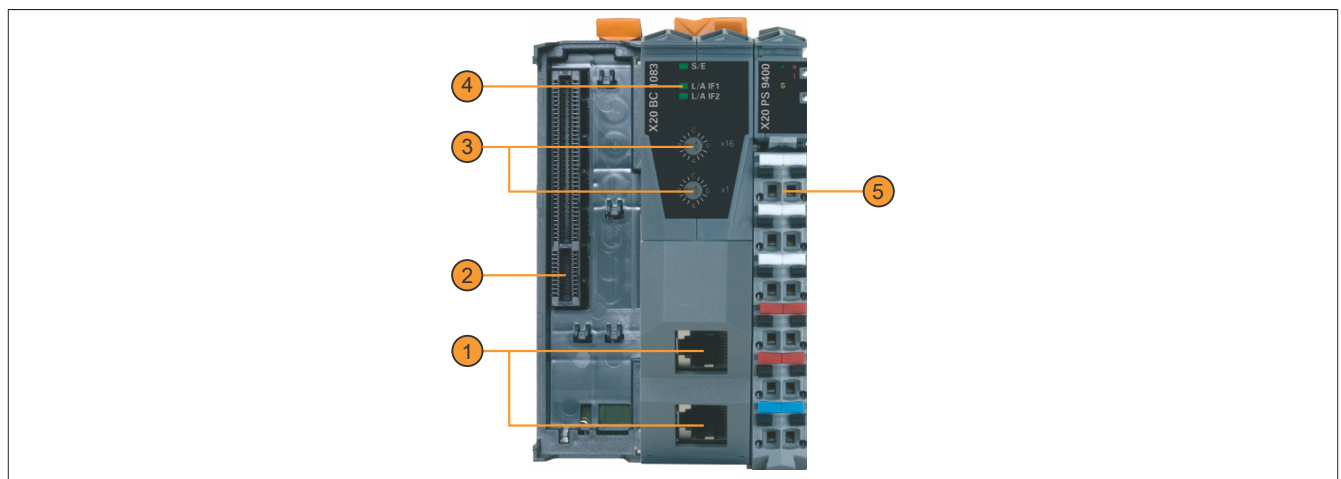


1	POWERLINK connection with 2x RJ45 for simple wiring	2	Slot for interface module
3	Node number switch	4	LED status indicators
5	Terminal block for bus controller and I/O supply	6	-

2.2.1 LED status indicators

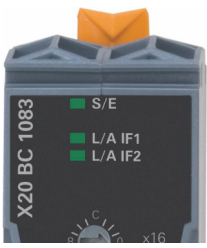Figure	LED	Color	Status	Description
	S/E ¹⁾	Green	Off	No power supply or mode NOT_ACTIVE. The controlled node (CN) is either not supplied with power or it is in state NOT_ACTIVE. The CN waits in this state for about 5 s after a restart. Communication is not possible with the CN. If no POWERLINK communication is detected during these 5 s, the CN changes to state BASIC_ETHERNET (flickering). If POWERLINK communication is detected before this time expires, however, the CN immediately changes to state PRE_OPERATIONAL_1.
			Flickering	Mode BASIC_ETHERNET. The CN has not detected any POWERLINK communication. In this state, it is possible to communicate directly with the CN (e.g. with UDP, IP). If POWERLINK communication is detected in this state, the CN enters state PRE_OPERATIONAL_1.
			Single flash	Mode PRE_OPERATIONAL_1. When operating on a POWERLINK V1 manager, the CN immediately changes to state PRE_OPERATIONAL_2. When operating on a POWERLINK V2 manager, the CN waits until an SoC frame is received and then changes to state PRE_OPERATIONAL_2.
			Double flash	Mode PRE_OPERATIONAL_2. The CN is normally configured by the manager in this state. It is then switched to state READY_TO_OPERATE by command (POWERLINK V2) or by setting flag "Data valid" in the output data (POWERLINK V1).
			Triple flash	Mode READY_TO_OPERATE. In a POWERLINK V1 network, the CN switches to state OPERATIONAL automatically as soon as input data is present. In a POWERLINK V2 network, the manager switches to state OPERATIONAL by command.
			On	Mode OPERATIONAL. PDO mapping is active and cyclic data is evaluated.
			Blinking	Mode STOPPED. Output data is not being output, and no input data is being provided. It is only possible to switch to or leave this state after the manager has given the appropriate command.
			Red	On
	<p>Note:</p> <ul style="list-style-type: none">Several red blinking signals are displayed immediately after the device is switched on. This is not an error, however.The LED lights up red for CNs with set physical node number 0 that have not yet been assigned a node number via dynamic node allocation (DNA).			
	L/A IFx	Green	On	Link established to the remote station
Blinking	A link to the remote station has been established and there is activity on bus.			

1) The Status/Error LED "S/E" is a green/red dual LED.


LED status indicators - Blink times

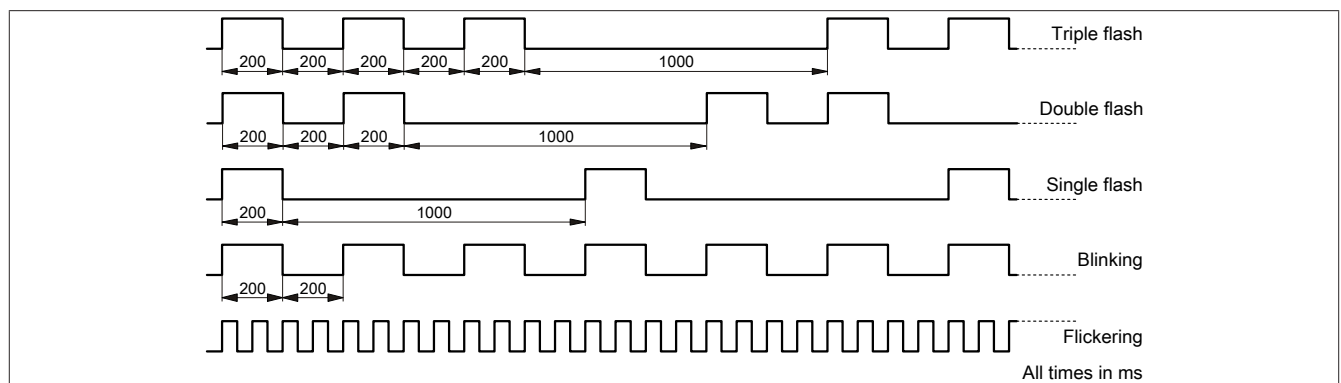

System stop error codes


A system stop error can occur due to incorrect configuration or defective hardware.

The error code is indicated by LED "S/E" blinking red. The blinking signal of the error code consists of 4 switch-on phases with short (150 ms) or long (600 ms) duration. The error code is repeated every 2 seconds.

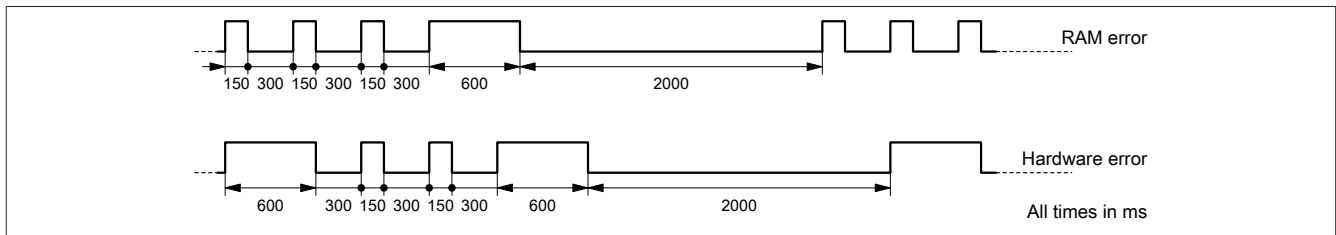

Error	Error description
RAM error	The device is defective and must be replaced.
Hardware error	The device or a system component is defective and must be replaced.

2.2.2 POWERLINK node number

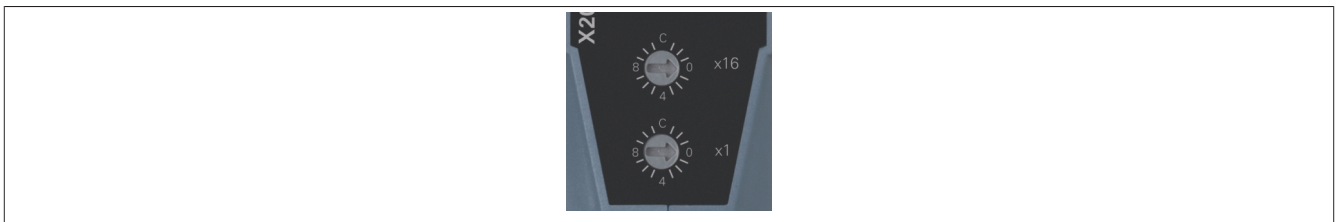



The node number for the POWERLINK node is set using the two number switches.

Switch position	Description
0x00	Only permitted when operating the POWERLINK node in DNA mode.
0x01 - 0xEF	Node number of the POWERLINK node. Operation as a controlled node (CN).
0xF0 - 0xFF	Reserved, switch position not permitted.

2.2.3 Ethernet interface

For information about wiring X20 modules with an Ethernet interface, see section "Mechanical and electrical configuration - Wiring guidelines for X20 modules with Ethernet cables" in the X20 user's manual.

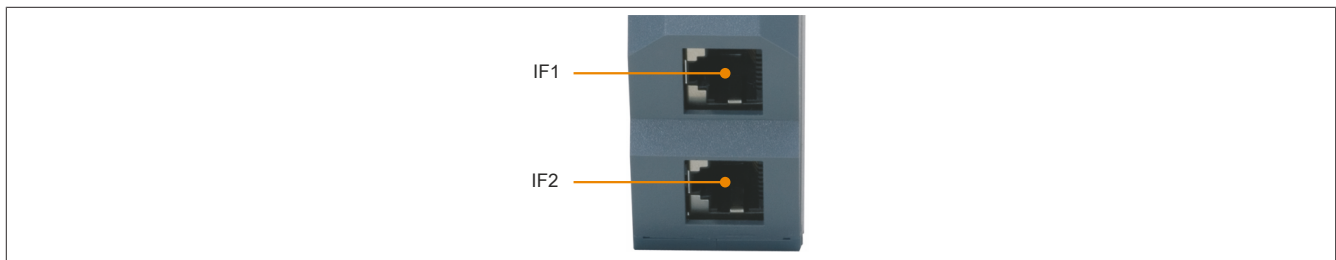

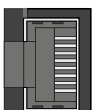Interface		Pinout	
 Shielded RJ45	Pin	Ethernet	
	1	RXD	Receive data
	2	RXD\	Receive data\
	3	TXD	Transmit data
	4	Termination	
	5	Termination	
	6	TXD\	Transmit data\
	7	Termination	
8	Termination		

2.2.4 Slot for interface modules

Depending on the bus base, up to two interface modules can be installed on the left side of the expandable bus controller:

Bus base	Slots for interface modules
X20BB81	1
X20BB82	2

Table 3: Slots for interface modules for various bus bases

3 Function description

3.1 POWERLINK

POWERLINK is an Ethernet-based, real-time capable fieldbus. POWERLINK extends the IEEE 802.3 Ethernet standard by a deterministic access method and also defines a CANopen-compatible fieldbus interface. POWERLINK distinguishes between process and service data in the same way as CANopen. Process data (PDO) is exchanged cyclically in the cyclic phase, while service data (SDO) is transferred acyclically. Service data objects are transmitted in the acyclic phases of POWERLINK using a connection-oriented protocol. The cyclic transfer of data in PDOs is enabled by "mapping".

For additional information, see [POWERLINK bus controller user's manual](#) and www.br-automation.com/en/technologies/powerlink.

4 Commissioning

4.1 SGx target systems

SG3

This module is not supported on SG3 target systems.

SG4

The module comes with preinstalled firmware. The firmware is also part of the Automation Runtime operating system for the PLC. With different versions, the Automation Runtime firmware is loaded onto the module.

Current firmware is made available automatically by updating Automation Runtime.

4.2 Dynamic node allocation (DNA)

Most POWERLINK bus controllers have the ability to dynamically assign node numbers. This has the following advantages:

- No setting of the node number switch
- Easier installation
- Reduced error sources

For information regarding configuration as well as an example, see Automation Help → Communication → POWERLINK → General information → Dynamic node allocation (DNA).

4.3 Operating the bus controller with netX modules and the X20IF1091-1

4.3.1 Operating netX controller modules

It is important to note the following in order to operate the module with the bus controller without problems:

- A minimum revision $\geq E0$ is required for the bus controller.
- The module can only be operated with the POWERLINK V2 setting. V1 is not permitted.
- With SDO access to POWERLINK object 0x1011/1 on the bus controller, the firmware and configuration stored on the bus controller are not reset. They can only be overwritten by accessing them again. This affects objects 0x20C0 and 0x20C8, subindexes 92 to 95.

4.3.2 Cycle synchronization with X20IF1091-1

The local X2X Link cycle of the bus controller is automatically synchronized with the X2X Link cycle of module X20IF1091-1. The local X2X Link cycle time of the bus controller is used as the main cycle time, however, not the POWERLINK cycle time.


To optimize the transfer time, a cycle time should be used on the X20IF1091-1 that is synchronous to the POWERLINK cycle time.

4.3.3 Runtime shift


The internal data transfer results in an additional runtime shift of one cycle per direction when using an X20IF10xx-1.

Example

Necessary transfer cycles between module and controller.

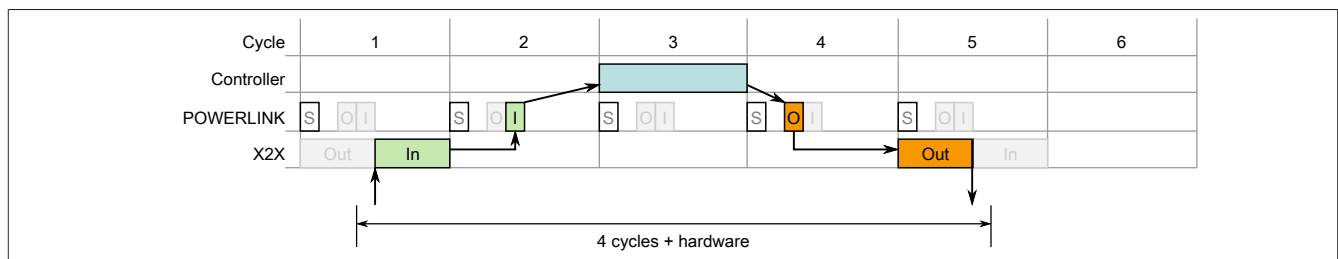

Required transfer cycles when using an X20IF10xx-1

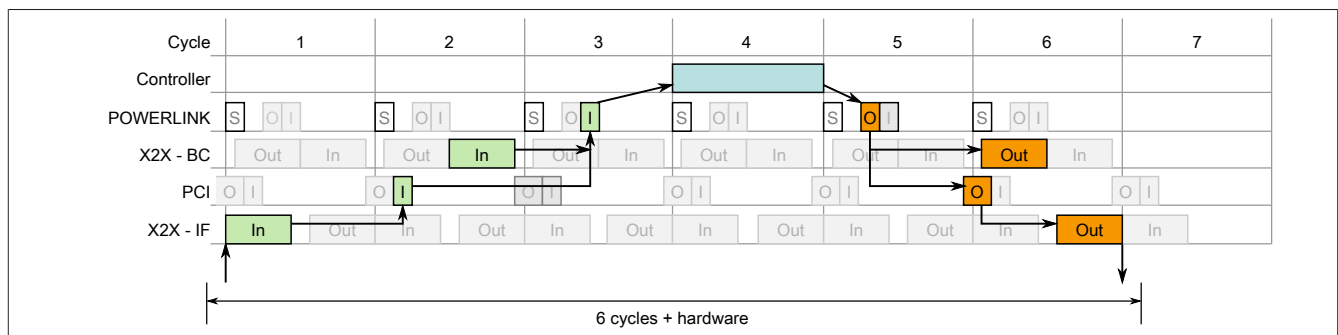

Information:

For detailed information about runtime and response time, see "Communication → POWERLINK → Response time" in Automation Help.