

X20PS2110

Data sheet
3.35 (August 2025)



Publishing information

B&R Industrial Automation GmbH

B&R Strasse 1

5142 Eggelsberg

Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

Disclaimer

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1247782280798-3.35

1 General information

1.1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

Document name	Title
MAX20	X20 System user's manual

1.2 Order data


Order number	Short description	Figure
	Power supplies	
X20PS2110	X20 power supply module, for internal I/O power supply, integrated fine-wire fuse	
	Required accessories	
	Bus modules	
X20BM01	X20 power supply bus module, 24 VDC keyed, internal I/O power supply interrupted to the left	
X20BM05	X20 power supply bus module, with node number switch, 24 VDC keyed, internal I/O power supply interrupted to the left	
	Terminal blocks	
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed	

Table 1: X20PS2110 - Order data

1.3 Module description

The power supply module is used for the internal I/O power supply. The module has an integrated replaceable fuse for the I/O power supply.

- 24 VDC supply module for internal I/O supply
- Fuse for I/O power supply integrated in module

Functions:

- [Monitoring the operating limits](#)

Monitoring operating limits

The voltage of the I/O power supply is monitored for voltage overshoot or undershoot.

2 Technical description

2.1 Technical data

 
Order number	X20PS2110
Short description	
Power supply module	24 VDC power supply module for internal I/O power supply
General information	
B&R ID code	0x2016
Status indicators	Operating state, module status
Diagnostics	
Module run/error	Yes, using LED status indicator and software
Power consumption ¹⁾	
Bus	0.2 W
Internal I/O	0.82 W
Additional power dissipation caused by actuators (resistive) [W]	-
Certifications	
CE	Yes
UKCA	Yes
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÜ 09 ATEX 0083X
UL	cULus E115267 Industrial control equipment
HazLoc	cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5
KC	Yes
Input I/O power supply	
Input voltage	24 VDC -15% / +20%
Input current	Max. 6 A
Fuse	Integrated 6.3 A, slow-blow, can be replaced
Reverse polarity protection	No
Output I/O power supply	
Nominal output voltage	24 VDC
Behavior on short circuit	Integrated fuse
Permissible contact load	6 A
Electrical properties	
Electrical isolation	I/O supply not isolated from I/O power supply
Operating conditions	
Mounting orientation	
Horizontal	Yes
Vertical	Yes
Installation elevation above sea level	
0 to 2000 m	No limitation
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m
Degree of protection per EN 60529	IP20
Ambient conditions	
Temperature	
Operation	
Horizontal mounting orientation	-25 to 60°C
Vertical mounting orientation	-25 to 50°C
Derating	-
Storage	-40 to 85°C
Transport	-40 to 85°C
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Mechanical properties	
Note	Order 1x terminal block X20TB12 separately. Order 1x power supply bus module X20BM01 separately
Pitch	12.5 ^{+0.2} mm

Table 2: X20PS2110 - Technical data


- 1) The specified values are maximum values. For examples of the exact calculation, see section "Mechanical and electrical configuration" in the X20 system user's manual.

2.2 LED status indicators


For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" in the X20 system user's manual.

Figure	LED	Color	Status	Description
	r	Green	Off	No power to module
			Single flash	RESET mode
			Blinking	PREOPERATIONAL mode
			On	RUN mode
	e	Red	Off	No power to module or everything OK
			Double flash	LED indicates one of the following states: <ul style="list-style-type: none"> I/O power supply too low X2X Link voltage too low
	e + r	Red on / green single flash		Invalid firmware

2.3 Pinout

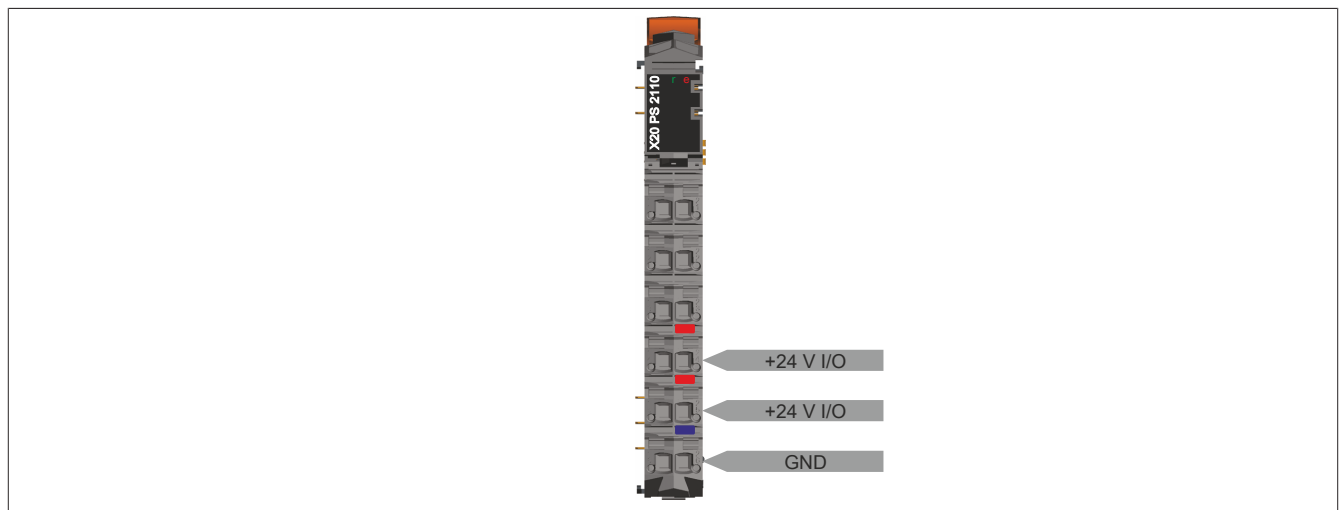

2.4 Connection example

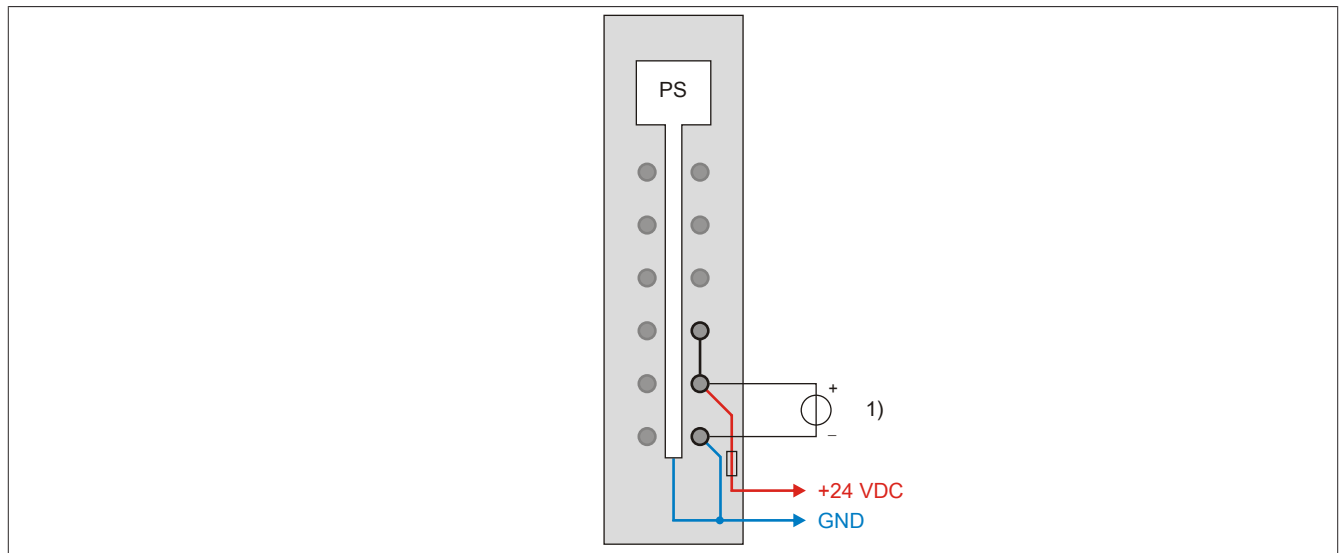


1) Supply for the I/O power supply

2.5 Replacing the built-in fuse

The module is equipped with a 6.3 A built-in fuse. Proceed as follows to replace a defective fuse:

- 1) Remove the fuse cover with the fuse on the right side of the module using a screwdriver.
- 2) Slide the cylindrical fuse out of the fuse holder and slide the new fuse in.

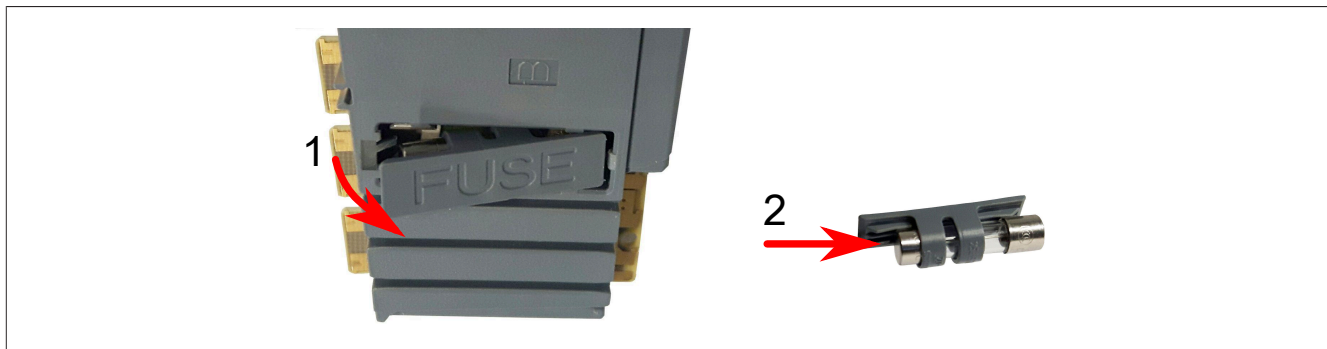

3 Function description

3.1 Monitoring the operating limits

The status of the bus supply voltage can be read out.

Bit	Description
0	No error
1	Warning for undervoltage (<4.7 V)

The status of the I/O supply voltage can be read out.

Bit	Description
0	I/O power supply above the warning limits of (20.4 V)
1	I/O power supply below the warning limits (20.4 V)

**Information:**

The register is described in ["Status of the module" on page 9](#).

4 Commissioning

4.1 Using the module on the bus controller

Function model 254 "Bus controller" is used by default only by non-configurable bus controllers. All other bus controllers can use other registers and functions depending on the fieldbus used.

For detailed information, see section "Additional information - Using I/O modules on the bus controller" in the X20 user's manual (version 3.50 or later).

4.1.1 CAN I/O bus controller

The module occupies 1 analog logical slot on CAN I/O.

4.2 Safe shutdown of potential group

In safety-related applications, it must be guaranteed that the potential group is safely shut down in order to achieve a category 4 shutdown in accordance with EN ISO 13849-1. An X20PS2100 (rev.F0 or higher) or X20PS2110 (rev.C0 or higher) supply module must be used to do this.

For important notes concerning "safe shutdown", see section "Mechanical and electrical configuration" of the X20 system user's manual. The user's manual can be downloaded from the Downloads section of the B&R website (www.br-automation.com).

5 Register description

5.1 General data points

In addition to the registers described in the register description, the module has additional general data points. These are not module-specific but contain general information such as serial number and hardware variant.

General data points are described in section "Additional information - General data points" in the X20 System user's manual.

5.2 Function model 0 - Standard

Register	Fixed offset	Name	Data type	Read		Write	
				Cyclic	Acyclic	Cyclic	Acyclic
0	1	Status of the module	USINT	•			
		StatusInput01	Bit 0				
		StatusInput02	Bit 1				
		StatusInput03	Bit 2				
4	3	SupplyVoltage	USINT	•			

Fixed modules require their data points to be in a specific order in the X2X frame. Cyclic access occurs according to a predefined offset, not based on the register address.

Acyclic access continues to be based on the register numbers.

5.3 Function model 254 - Bus controller

Register	Offset ¹⁾	Name	Data type	Read		Write	
				Cyclic	Acyclic	Cyclic	Acyclic
0	0	Status of the module	UINT	•			
		StatusInput01	Bit 0				
		StatusInput02	Bit 1				
		StatusInput03	Bit 2				
4	4	SupplyVoltage	UINT	•			

1) The offset specifies the position of the register within the CAN object.

5.4 Status of the module

Name:

Module status

The following module supply voltages are monitored in this register:

Bus supply voltage:	A bus supply voltage of <4.7 V is displayed as a warning.
24 VDC I/O supply voltage:	An I/O supply voltage of <20.4 V is displayed as a warning.
Safety status:	Applies to hardware revision C0 and later. When using modules <C0, a defective fuse is not detected!

Function model	Data type	Values
0 - Standard	USINT	See the bit structure.
254 - Bus controller	UINT	See the bit structure.

Bit structure:

Bit	Name	Value	Information
0	StatusInput01	0	No error
		1	Bus supply warning - Undervoltage (<4.7 V)
1	StatusInput02	0	Fuse OK or hardware revision <C0
		1	Fuse defective
2	StatusInput03	0	I/O power supply above the warning threshold of 20.4 V
		1	I/O power supply below the warning threshold of 20.4 V
3 - x	Reserved	0	

5.5 Bus supply voltage

Name:

SupplyVoltage

This register indicates the measured bus supply voltage with a resolution of 0.1 V.



Information:

The nominal bus supply voltage is 5 V and should not fall below 4.7 V.

Function model	Data type
0 - Standard	USINT
254 - Bus controller	UINT

5.6 Minimum cycle time

The minimum cycle time specifies how far the bus cycle can be reduced without communication errors occurring. It is important to note that very fast cycles reduce the idle time available for handling monitoring, diagnostics and acyclic commands.

Minimum cycle time
100 μ s

5.7 Minimum I/O update time

The minimum I/O update time specifies how far the bus cycle can be reduced so that an I/O update is performed in each cycle.

Minimum I/O update time
2 ms