

X20(c)PS2100

Data sheet 3.25 (August 2025)



Publishing information

B&R Industrial Automation GmbH B&R Strasse 1 5142 Eggelsberg Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

Disclaimer

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1247782280787-3.25

1 General information

1.1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

Document name	Title
MAX20	X20 System user's manual

1.2 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation and corrosive gases.

The modules' electronics are fully compatible with the corresponding X20 modules.



For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, method 4, exposure 21 days







1.3 Order data

Order number	Short description
	Power supplies
X20PS2100	X20 power supply module, for internal I/O power supply
X20cPS2100	X20 power supply module, coated, for internal I/O power
	supply
	Required accessories
	Bus modules
X20BM01	X20 power supply bus module, 24 VDC keyed, internal I/O
	power supply interrupted to the left
X20BM05	X20 power supply bus module, with node number switch, 24
	VDC keyed, internal I/O power supply interrupted to the left
X20cBM01	X20 power supply bus module, coated, 24 VDC keyed, inter-
	nal I/O power supply interrupted to the left
	Terminal blocks
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed

Table 1: X20PS2100, X20cPS2100 - Order data

1.4 Module description

The supply module is used for the internal I/O supply.

24 VDC supply module for internal I/O supply

Functions:

· Monitoring the operating limits

Monitoring operating limits

The voltage of the I/O power supply is monitored for voltage overshoot or undershoot.

X20(c)PS2100 Data sheet V 3.25

2 Technical description

2.1 Technical data

24 VDC power supply module for	or internal I/O power supply
0x1BBF	0xE23C
Operating state, r	nodule status
Yes, using LED status inc	dicator and software
0.2 W	V
0.6 W	V
-	
Yes	
Yes	
Zone 2, II 3G Ex n <i>i</i> IP20, Ta (see X20 u FTZÚ 09 ATE	user's manual)
cULus E11 Industrial contro	
cCSAus 24 Process control for hazardous Class I, Division 2, G	44665 equipment locations roups ABCD, T5
Humidity: B (uj Vibration: EMC: B (bridge an	p to 100%) B (4 g)
Yes	-
ENV	1
Yes	
Yes	
EC33 Temperature Vibratior EMC: Bridge and	ı: 5 - 55°C n: 4 g
Yes	-
24 VDC -15%	0 / +20%
	-
<u> </u>	,
24 VD	C
10 A	
I/O supply not isolated fr	om I/O power supply
, :	, e
Yes	
No limita	ation
11 20	
-25 to 6	0°C
25 10 0	~ ~
-25 to 5	0°C
-25 to 5	0°C
-25 to 5 - -40 to 8	
	Operating state, r Yes, using LED status ind 0.2 W 0.6 V 0.6 V - Yes Yes Zone 2, II 3G Ex. IP20, Ta (see X20 U FTZÚ 09 ATE CULus EI: Industrial contro cCSAus 24 Process control for hazardous Class I, Division 2, G Temperature: B Humidity: B (u Vibration: EMC: B (bridge ar Yes ENV: Yes Yes EC33 Temperature: Vibratior EMC: Bridge and Yes 24 VDC -15% Required line fuse: Ma No

Table 2: X20PS2100, X20cPS2100 - Technical data

5

Order number	X20PS2100	X20cPS2100			
Relative humidity					
Operation	5 to 95%, non-condensing Up to 100%, condensing				
Storage	5 to 95%, non-condensing				
Transport	5 to 95%, non-condensing				
Mechanical properties					
Note	Order 1x terminal block X20TB12 separately. Order 1x power supply bus module X20BM01 separately	Order 1x terminal block X20TB12 separately. Order 1x power supply bus module X20cBM01 separately			
Pitch	12.5 ⁺⁰² mm				

Table 2: X20PS2100, X20cPS2100 - Technical data


The specified values are maximum values. For examples of the exact calculation, see section "Mechanical and electrical configuration" in the X20 system user's manual.

2.2 LED status indicators

For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" in the X20 system user's manual.


Figure	LED	Color	Status	Description
	r	Green	Off	No power to module
			Single flash	RESET mode
			Blinking	PREOPERATIONAL mode
			On	RUN mode
2100	е	Red	Off	No power to module or everything OK
SS E			Double flash	LED indicates one of the following states:
				I/O supply too low
X20				X2X link voltage too low
The second second	e + r	Red on / Green	single flash	Invalid firmware

2.3 Pinout

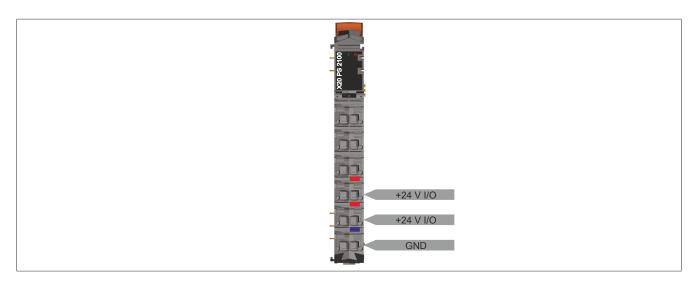

X20(c)PS2100 Data sheet V 3.25

2.4 Connection example

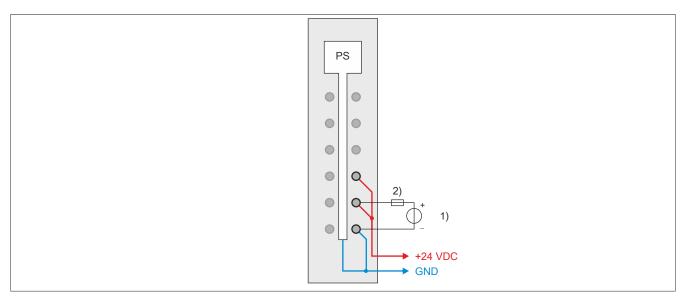

- 1) 2) Supply for the I/O power supply Fuse, 10 A slow-blow

3 Function description

3.1 Monitoring the operating limits

The status of the bus supply voltage can be read out.

Bit	Description
0	No error
1	Warning for undervoltage (<4.7 V)

The status of the I/O supply voltage can be read out.

Bit	Description
0	I/O power supply above the warning limits of (20.4 V)
1	I/O power supply below the warning limits (20.4 V)



Information:

The register is described in "Status of the module" on page 9.

4 Commissioning

4.1 Using the module on the bus controller

Function model 254 "Bus controller" is used by default only by non-configurable bus controllers. All other bus controllers can use other registers and functions depending on the fieldbus used.

For detailed information, see section "Additional information - Using I/O modules on the bus controller" in the X20 user's manual (version 3.50 or later).

4.1.1 CAN I/O bus controller

8

The module occupies 1 analog logical slot on CAN I/O.

4.2 Safe shutdown of potential group

In safety-related applications, it must be guaranteed that the potential group is safely shut down in order to achieve a category 4 shutdown in accordance with EN ISO 13849-1. An X20PS2100 (rev.F0 or higher) or X20PS2110 (rev.C0 or higher) supply module must be used to do this.

For important notes concerning "safe shutdown", see section "Mechanical and electrical configuration" of the X20 system user's manual. The user's manual can be downloaded from the Downloads section of the B&R website (www.br-automation.com).

5 Register description

5.1 General data points

In addition to the registers described in the register description, the module has additional general data points. These are not module-specific but contain general information such as serial number and hardware variant.

General data points are described in section "Additional information - General data points" in the X20 System user's manual.

5.2 Function model 0 - Standard

Register	Fixed offset	Name	Data type	Read		Write	
				Cyclic	Acyclic	Cyclic	Acyclic
0	1	Status of the module	USINT	•			
		StatusInput01	Bit 0				
		StatusInput02	Bit 2				
4	3	SupplyVoltage	USINT	•			

Fixed modules require their data points to be in a specific order in the X2X frame. Cyclic access occurs according to a predefined offset, not based on the register address.

Acyclic access continues to be based on the register numbers.

5.3 Function model 254 - Bus controller

Register	Offset1)	Name	Data type	Read		Write		
				Cyclic	Acyclic	Cyclic	Acyclic	
0	0	Status of the module	UINT	•				
		StatusInput01	Bit 0					
		StatusInput02	Bit 2					
4	4	SupplyVoltage	UINT	•				

¹⁾ The offset specifies the position of the register within the CAN object.

5.4 Status of the module

Name:

Module status

The following module power supply voltages are monitored in this register:

Bus supply voltage:

Bus supply voltage < 4.7 V is displayed as a warning.

1/O supply voltage < 20.4 V is displayed as a warning.

Function model	Data type	Values
0 - Standard	USINT	See the bit structure.
254 - Bus controller	UINT	See the bit structure.

Bit structure:

Bit	Name	Value	Information
0	StatusInput01	0 No error	
		1	Bus power supply warning - Undervoltage (<4.7 V)
1	Reserved	0	
2	StatusInput02	0	I/O power supply above the warning limit of 20.4 V
		1	I/O power supply below the warning limit of 20.4 V
3 - x	Reserved	0	

X20(c)PS2100 Data sheet V 3.25

5.5 Bus supply voltage

Name:

SupplyVoltage

This register indicates the measured bus supply voltage with a resolution of 0.1 V.



Information:

The nominal bus supply voltage is 5 V and should not fall below 4.7 V.

Function model	Data type	
0 - Standard	USINT	
254 - Bus controller	UINT	

5.6 Minimum cycle time

The minimum cycle time specifies how far the bus cycle can be reduced without communication errors occurring. It is important to note that very fast cycles reduce the idle time available for handling monitoring, diagnostics and acyclic commands.

Minimum cycle time	
100 µs	

5.7 Minimum I/O update time

The minimum I/O update time specifies how far the bus cycle can be reduced so that an I/O update is performed in each cycle.

Minimum I/O update time
2 ms