

X20(c)DO9322

Data sheet 3.21 (July 2025)



Publishing information

B&R Industrial Automation GmbH B&R Strasse 1 5142 Eggelsberg Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

Disclaimer

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1247782281176-3.21.1

1 General information

1.1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

Document name	Title
MAX20	X20 System user's manual

1.2 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation and corrosive gases.

The modules' electronics are fully compatible with the corresponding X20 modules.

For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, method 4, exposure 21 days







1.2.1 Starting temperature

The starting temperature describes the minimum permissible ambient temperature in a voltage-free state at the time the coated module is switched on. This is permitted to be as low as -40°C. During operation, the conditions as specified in the technical data continue to apply.



Information:

It is important to absolutely ensure that there is no forced cooling by air currents in the closed control cabinet, e.g. due to the use of a fan or ventilation slots.

1.3 Order data

Order number	Short description	
	Digital output modules	
X20DO9322	X20 digital output module, 12 outputs, 24 VDC, 0.5 A, source, 1-wire connections	
X20cDO9322 X20 digital output module, coated, 12 outputs, 24 VDC, 0.5 A, source, 1-wire connections		
	Required accessories	
	Bus modules	
X20BM11	X20 bus module, 24 VDC keyed, internal I/O power supply connected through	
X20BM15	X20 bus module, with node number switch, 24 VDC keyed internal I/O power supply connected through	
X20cBM11	X20 bus module, coated, 24 VDC keyed, internal I/O power supply connected through	
	Terminal blocks	
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed	

Table 1: X20DO9322, X20cDO9322 - Order data

General information

1.4 Module description

This module is equipped with 12 outputs for 1-wire connections. The outputs are designed for a source circuit.

Functions:

Digital outputs

Monitoring status of the digital outputs

The output signal of the digital outputs is monitored for short circuit or overload, as is the state of the power supply.

2 Technical description

2.1 Technical data

Order number	X20D09322	X20cDO9322		
Short description				
I/O module	12 digital outputs 24 VD	DC for 1-wire connections		
General information	12 d.g.td. 0 deputs 2 1 1 2			
B&R ID code	0x1B9A	0xD578		
Status indicators	I/O function per channel, operating state, module status			
Diagnostics	i) o ranction per charmer, op	- Tracing state, module status		
	Yes, using LED status indicator and software			
Module run/error	-			
Outputs	Yes, using LED status indicator and software (output error status)			
Power consumption		C IVI		
Bus	0.26 W			
Internal I/O	1.15 W			
Additional power dissipation caused by actuators (resistive) [W] ¹⁾	+0	0.63		
Certifications				
CE	Y	es		
UKCA	Y	es		
ATEX	Zone 2, II 3G Ex	nA nC IIA T5 Gc		
	IP20, Ta (see X2	0 user's manual) TEX 0083X		
UL		E115267		
		trol equipment		
HazLoc		3 244665		
		rol equipment		
		ous locations		
	Class I, Division 2	, Groups ABCD, T5		
DNV	Temperature	e: B (0 to 55°C)		
	Humidity: B	(up to 100%)		
		n: B (4 g)		
		and open deck)		
CCS	Yes	-		
LR	EN	NV1		
KR	Y	es		
ABS	Y	'es		
BV	EC	33B		
	·	ure: 5 - 55°C		
		ion: 4 g		
	-	and open deck		
КС	Yes	-		
Digital outputs				
Variant	Current-so	purcing FET		
Nominal voltage	24'	VDC		
Switching voltage	24 VDC -19	5% / +20%		
Nominal output current	0.:	5 A		
Total nominal current	6	Ā		
Connection type	1-wire co	nnections		
Output circuit	Sou	urce		
Output protection	Thermal shutdown in th	e event of overcurrent or		
and the second		hort-circuit peak current")		
	Internal freewheeling diode for switching inducti	ive loads (see section "Switching inductive loads")		
Diagnostic status	Output monitorin	g with 10 ms delay		
Leakage current when the output is switched off	5	μΑ		
	210	mΩ		
R _{DS(on)}				
Peak short-circuit current		2 A		
Switch-on in the event of overload shutdown or	Approx. 10 ms (depends o	n the module temperature)		
short-circuit shutdown				
Switching delay ²⁾		10		
0 → 1		00 μs		
1 → 0	<30	00 μs		
Switching frequency				
Resistive load ²⁾		500 Hz		
Inductive load	See section "Switch	ing inductive loads".		
Braking voltage when switching off inductive	Typ. 5	50 VDC		
loads	500	D.V.		
Insulation voltage between channel and bus	500) V _{eff}		

Table 2: X20DO9322, X20cDO9322 - Technical data

Technical description

Order number	X20DO9322	X20cDO9322		
Electrical properties				
Electrical isolation		ated from bus		
	Channel not isolated from c	hannel and I/O power supply		
Operating conditions				
Mounting orientation				
Horizontal	Y	'es		
Vertical	Y	'es		
Installation elevation above sea level				
0 to 2000 m	No lim	nitation		
>2000 m	Reduction of ambient tem	perature by 0.5°C per 100 m		
Degree of protection per EN 60529	IF	220		
Ambient conditions				
Temperature				
Operation				
Horizontal mounting orientation	-25 to 60°C			
Vertical mounting orientation	-25 to	o 50°C		
Derating	See section	n "Derating".		
Starting temperature	-	Yes, -40°C		
Storage	-40 to	o 85°C		
Transport	-40 to	o 85°C		
Relative humidity				
Operation	5 to 95%, non-condensing	Up to 100%, condensing		
Storage	5 to 95%, no	n-condensing		
Transport	5 to 95%, non-condensing			
Mechanical properties				
Note	Order 1x terminal block X20TB12 separately.	Order 1x terminal block X20TB12 separately.		
	Order 1x bus module X20BM11 separately.	Order 1x bus module X20cBM11 separately.		
Pitch	12.5*	12.5 ^{+0.2} mm		

Table 2: X20DO9322, X20cDO9322 - Technical data


- 1) Number of outputs x R_{DS(on)} x Nominal output current². For a calculation example, see section "Mechanical and electrical configuration" in the X20 system user's manual.
- 2) At loads $\leq 1 k\Omega$

2.2 Status LEDs


For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" in the X20 system user's manual.

Figure	LED	Color	Status	Description
	r	Green	Off	Module supply not connected
			Single flash	RESET mode
			Blinking	PREOPERATIONAL mode
N re-			On	RUN mode
22 1 2 5 6 3 4	e Re	Red	Off	Module supply not connected or everything OK
00 5 6 F			Single flash	Warning/Error on an I/O channel. Level monitoring for digital outputs has been triggered.
2 9 10	e + r	Red on / Green	n single flash	Invalid firmware
X 11 12	1 - 12	Orange		Output status of the corresponding digital output

2.3 Pinout

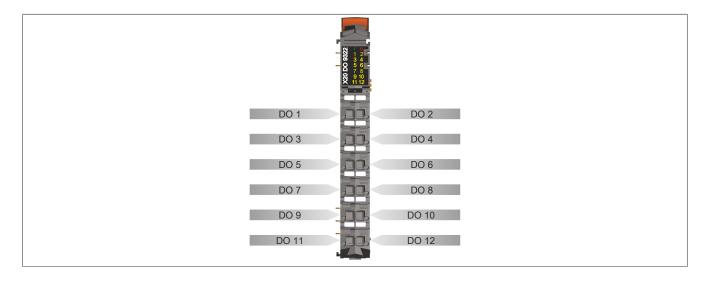

2.4 Connection example

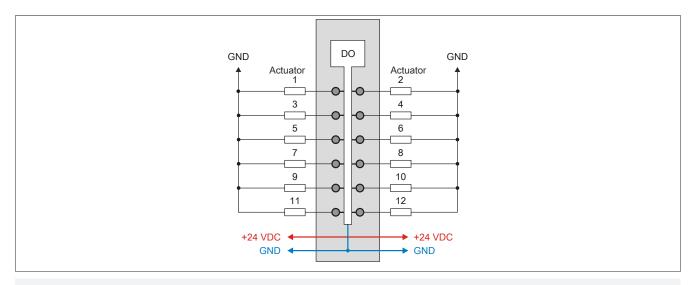



Caution!

If the module is operated outside specifications, the output current may rise above the maximum permissible nominal current. This applies both to individual channels and to the summation current of the module.

Appropriate cable cross-sections or external safety measures must therefore be provided.




Attention!

Si le module est utilisé en dehors des spécifications, le courant de sortie peut dépasser le courant nominal maximal autorisé. Ceci s'applique aussi bien aux voies individuelles qu'au courant de sommation du module.

Il faut donc prévoir des sections de câble appropriées ou des mesures de sécurité externes.

2.5 Output circuit diagram

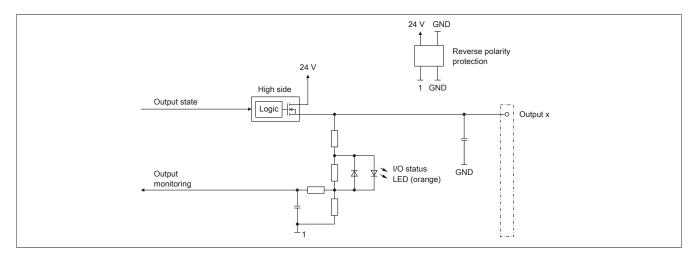

2.6 Module installation

The following must be noted when installing the module in the X20 System:



Caution!

The module must be installed so that the left side of the module is not accessible to the user. Module X20FZ0000 can be used temporarily if the left side of the module is not occupied.



Attention!

Le module doit être installé de manière à ce que le côté gauche du module ne soit pas accessible à l'utilisateur. Le module X20FZ0000 peut être utilisé temporairement si le côté gauche du module n'est pas occupé.


2.7 Derating

There is no derating when operated below 55°C.


The maximum current per channel is reduced to 0.35 A when operated above 55°C!

2.8 Switching inductive loads

Ambient temperature: 55°C, all outputs with the same load

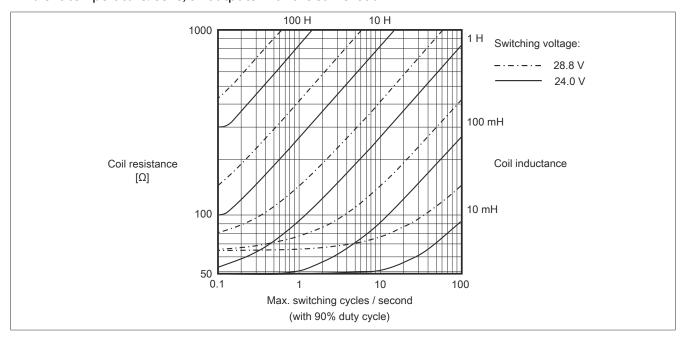

Ambient temperature: 60°C, all outputs with the same load

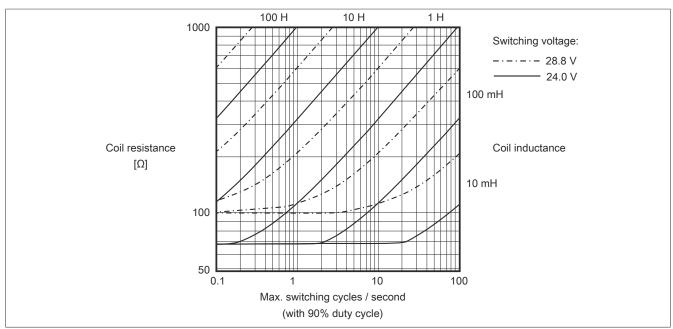



Information:

If the maximum number of operating cycles per second is exceeded, an external inverse diode must be used.

Operating conditions outside of the area in the diagram are not permitted!

X20(c)DO9322 Data sheet V 3.21

3 Function description

3.1 Digital outputs

The module is equipped with 12 digital outputs.

The output state is transferred to the output channels with a fixed offset ($<60 \,\mu s$) in relation to the network cycle (SyncOut).

Packed outputs (only function model 0 - Standard)

Setting "Packed outputs" in the Automation Studio I/O configuration can be used to determine whether all bits of the register should be applied as individual data points in the Automation Studio I/O mapping (e.g. "DigitalOutput01 to DigitalOutputxx") or whether the register should be displayed as a single UINT data point (e.g. "DigitalOutput").



Information:

The register is described in "Switching state of digital outputs 1 to 12" on page 12.

3.1.1 Monitoring status of the outputs

On the module, the output states of the outputs are compared to the target states. The control of the output driver is used for the target state.

A change in the output state resets monitoring for that output. The status of each individual channel can be read out. A change in the monitoring status is actively transmitted as an error message.

Supervision status	Description	
0	Digital output channel: No error	
1	Digital output channel:	
	Short circuit or overload	
	Channel switched on and missing I/O power supply	
	Channel switched off and external voltage applied to channel	



Information:

The register is described in "Status of digital outputs 1 to 12" on page 13.

3.2 Commissioning

3.2.1 Using the module on the bus controller

Function model 254 "Bus controller" is used by default only by non-configurable bus controllers. All other bus controllers can use other registers and functions depending on the fieldbus used.

For detailed information, see section "Additional information - Using I/O modules on the bus controller" in the X20 user's manual (version 3.50 or later).

3.2.1.1 CAN I/O bus controller

The module occupies 2 digital logical slots on CAN I/O.

4 Register description

4.1 General data points

In addition to the registers described in the register description, the module has additional general data points. These are not module-specific but contain general information such as serial number and hardware variant.

General data points are described in section "Additional information - General data points" in the X20 System user's manual.

4.2 Function model 0 - Standard

Register	Fixed offset	Name	Data type	Read		W	rite
				Cyclic	Acyclic	Cyclic	Acyclic
	1	DigitalOutput	UINT			•	
2	0	Switching state of digital outputs 1 to 8	USINT			•	
		DigitalOutput01	Bit 0				
		DigitalOutput08	Bit 7				
3	1	Switching state of digital outputs 9 to 12	USINT			•	
		DigitalOutput09	Bit 0				
		DigitalOutput12	Bit 3				
	1	StatusInput01	UINT	•			
30	1	Status of digital outputs 1 to 8	USINT	•			
		StatusDigitalOutput01	Bit 0				
		StatusDigitalOutput08	Bit 7				
31	2	Status of digital outputs 9 to 12	USINT	•			
		StatusDigitalOutput09	Bit 0				
		StatusDigitalOutput12	Bit 3				

Fixed modules require their data points to be in a specific order in the X2X frame. Cyclic access occurs according to a predefined offset, not based on the register address.

Acyclic access continues to be based on the register numbers.

4.3 Function model 254 - Bus controller

Register	Offset ¹⁾	Name	Data type	Re	ad	Wr	ite
				Cyclic	Acyclic	Cyclic	Acyclic
2	0	Switching state of digital outputs 1 to 8	USINT			•	
		DigitalOutput01	Bit 0				
		DigitalOutput08	Bit 7				
3	1	Switching state of digital outputs 9 to 12	USINT			•	
		DigitalOutput09	Bit 0				
		DigitalOutput12	Bit 3				
30	-	Status of digital outputs 1 to 8	USINT		•		
		StatusDigitalOutput01	Bit 0				
		StatusDigitalOutput08	Bit 7				
31	-	Status of digital outputs 9 to 12	USINT		•		
		StatusDigitalOutput09	Bit 0				
		StatusDigitalOutput12	Bit 3				

¹⁾ The offset specifies the position of the register within the CAN object.

X20(c)DO9322 Data sheet V 3.21

4.4 Digital outputs

4.4.1 Switching state of digital outputs 1 to 12

Name:

DigitalOutput

DigitalOutput01 to DigitalOutput12

This register stores the switching state of digital outputs 1 to 12.

Data type	Values	Information ¹⁾	
UINT	0 to 4095	Packed outputs = On	
		Data point: "DigitalOutput"	
USINT	See the bit structure.	Packed outputs = Off or function model ≠ 0 - Standard.	
		Data points: "DigitalOutput01" to "DigitalOutput12"	

¹⁾ See "Digital outputs" on page 10.

Bit structure:

Register 2, offset 0:

Bit	Description	Value	Information
0	DigitalOutput01	0	Digital output 01 reset
		1	Digital output 01 set
7	DigitalOutput08	0	Digital output 08 reset
		1	Digital output 08 set

Register 3, offset 1:

Bit	Description	Value	Information
0	DigitalOutput09	0	Digital output 09 reset
		1	Digital output 09 set
3	DigitalOutput12	0	Digital output 12 reset
		1	Digital output 12 set

4.5 Monitoring status of the digital outputs

On the module, the output states of the outputs are compared to the target states.

4.5.1 Status of digital outputs 1 to 12

Name:

StatusInput01

StatusDigitalOutput01 to StatusDigitalOutput12

This register contains the state of digital outputs 1 to 12.

Data type	Values	Information	
UINT	0 to 4095	Packed outputs = On	
		Data point: "StatusInput01"	
USINT	See the bit structure.	Packed outputs = Off or function model ≠ 0 - Standard.	
		Data points: "StatusDigitalOutput01" to "StatusDigitalOutputput12"	

¹⁾ See "Digital outputs" on page 10.

Bit structure:

Register 30, (offset 1):

Bit	Description	Value	Description
0	StatusDigitalOutput01	0	Channel 01: No error
		1	Channel 01:
			Short circuit or overload
			Channel switched on and missing I/O power supply
			Channel switched off and external voltage applied to channel
7	StatusDigitalOutput08	0	Channel 08: No error
		1	Channel 08: For an error description, see channel 01.

Register 31, (offset 2):

Bit	Description	Value	Information
0	StatusDigitalOutput09	0	Channel 09: No error
		1	Channel 09:
			Short circuit or overload
			Channel switched on and missing I/O power supply
			Channel switched off and external voltage applied to channel
3	StatusDigitalOutput12	0	Channel 12: No error
		1	Channel 12: For an error description, see channel 09.

4.6 Minimum cycle time

The minimum cycle time specifies how far the bus cycle can be reduced without communication errors occurring. It is important to note that very fast cycles reduce the idle time available for handling monitoring, diagnostics and acyclic commands.

Minimum cycle time	
100 μs	

4.7 Minimum I/O update time

The minimum I/O update time specifies how far the bus cycle can be reduced so that an I/O update is performed in each cycle.

	Minimum I/O update time
Equal to the minimum cycle time	

X20(c)DO9322 Data sheet V 3.21