

X20AO2632

Data sheet
3.30 (June 2025)



Publishing information

B&R Industrial Automation GmbH

B&R Strasse 1

5142 Eggelsberg

Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

Disclaimer

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1247782281289-3.30

1 General information

1.1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

| Document name | Title |
|---------------|--|
| MAX20 | X20 System user's manual |

1.2 Order data


| Order number | Short description | Figure |
|--------------|---|--|
| | Analog output modules |  |
| X20AO2632 | X20 analog output module, 2 outputs, ±10 V or 0 to 20 mA, 16-bit converter resolution, NetTime function | |
| | Required accessories | |
| | Bus modules | |
| X20BM11 | X20 bus module, 24 VDC keyed, internal I/O power supply connected through | |
| X20BM15 | X20 bus module, with node number switch, 24 VDC keyed, internal I/O power supply connected through | |
| | Terminal blocks | |
| X20TB06 | X20 terminal block, 6-pin, 24 VDC keyed | |
| X20TB12 | X20 terminal block, 12-pin, 24 VDC keyed | |
| | | |

Table 1: X20AO2632 - Order data

1.3 Module description

The module is equipped with 2 outputs with 16-bit, including sign, digital converter resolution. It is possible to select between the current and voltage signal using different terminals.

This module is designed for X20 6-pin terminal blocks. If needed (e.g. for logistical reasons), the 12-pin terminal block can also be used.

Functions:

- [Analog outputs](#)
- [Time-controlled monitoring of the outputs](#)
- [NetTime Technology](#)

Analog outputs

The module is equipped with analog outputs with a configurable current and/or voltage signal.

Time-controlled monitoring of the outputs

The module has time-controlled monitoring ("watchdog") of the outputs. If required, it can be enabled by the user on a channel-by-channel basis.

NetTime timestamp for output

For many applications, not only the output value is important, but also the exact switching time. The module is equipped with a NetTime timestamp function for this that can define a switching time to the nearest microsecond.

2 Technical description

2.1 Technical data

| | |
|--|---|
| Order number | X20AO2632 |
| Short description | |
| I/O module | 2 analog outputs ± 10 V or 0 to 20 mA |
| General information | |
| B&R ID code | 0x1BA4 |
| Status indicators | I/O function per channel, operating state, module status |
| Diagnostics | |
| Module run/error | Yes, using LED status indicator and software |
| Channel type | Yes, using software |
| Power consumption | |
| Bus | 0.01 W |
| Internal I/O | 1.1 W |
| Additional power dissipation caused by actuators (resistive) [W] | - |
| Certifications | |
| CE | Yes |
| UKCA | Yes |
| ATEX | Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÚ 09 ATEX 0083X |
| UL | cULus E115267 Industrial control equipment |
| HazLoc | cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5 |
| DNV | Temperature: B (0 to 55°C) Humidity: B (up to 100%) Vibration: B (4 g) EMC: B (bridge and open deck) |
| CCS | Yes |
| LR | ENV1 |
| KR | Yes |
| ABS | Yes |
| BV | EC33B Temperature: 5 - 55°C Vibration: 4 g EMC: Bridge and open deck |
| KC | Yes |
| Analog outputs | |
| Output | ± 10 V or 0 to 20 mA, via different terminal connections |
| Digital converter resolution | |
| Voltage | ± 15 -bit |
| Current | 15-bit |
| Conversion time | 50 μ s for all outputs |
| Settling time on output change over entire range | 500 μ s (Rev. <H0: 1 ms) |
| Switch on/off behavior | Internal enable relay for startup |
| Max. error ¹⁾ | |
| Voltage | |
| Gain | $\pm 0.045\%$ ²⁾ |
| Offset | $\pm 0.025\%$ ³⁾ |
| Current | |
| Gain | $\pm 0.09\%$ ²⁾ |
| Offset | $\pm 0.045\%$ ³⁾ |
| Output protection | Short-circuit proof |
| Output format | |
| Voltage | INT 0x8000 - 0x7FFF / 1 LSB = 0x0001 = 305.176 μ V |
| Current | INT 0x0000 - 0x7FFF / 1 LSB = 0x0001 = 610.352 nA |
| Load per channel | |
| Voltage | Max. ± 10 mA, load ≥ 1 k Ω |
| Current | Load max. 600 Ω (Rev. \geq J0), 500 Ω (Rev. < J0) |
| Short-circuit proof | Current limiting ± 40 mA |
| Output filter | First-order low-pass filter / cutoff frequency 10 kHz |

Table 2: X20AO2632 - Technical data

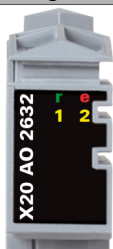
| Order number | X20AO2632 | |
|--|---|--|
| Max. gain drift | | |
| Voltage | $\pm 0.015\%/^{\circ}\text{C}^{2)}$ | |
| Current | $\pm 0.02\%/^{\circ}\text{C}^{2)}$ | |
| Max. offset drift | | |
| Voltage | $\pm 0.013\%/^{\circ}\text{C}^{3)}$ | |
| Current | $\pm 0.013\%/^{\circ}\text{C}^{3)}$ | |
| Error caused by load change | | |
| Voltage | Max. 0.11%, from 10 M Ω → 1 k Ω , resistive | |
| Current | Max. 0.5%, from 1 Ω → 600 Ω , resistive | |
| Nonlinearity | $< 0.007\%^{3)}$ | |
| Insulation voltage between channel and bus | 500 V _{eff} | |
| Electrical properties | | |
| Electrical isolation | Channel isolated from bus Channel not isolated from channel | |
| Operating conditions | | |
| Mounting orientation | | |
| Horizontal | Yes | |
| Vertical | Yes | |
| Installation elevation above sea level | | |
| 0 to 2000 m | No limitation | |
| >2000 m | Reduction of ambient temperature by 0.5°C per 100 m | |
| Degree of protection per EN 60529 | IP20 | |
| Ambient conditions | | |
| Temperature | | |
| Operation | | |
| Horizontal mounting orientation | -25 to 60°C | |
| Vertical mounting orientation | -25 to 50°C | |
| Derating | - | |
| Storage | -40 to 85°C | |
| Transport | -40 to 85°C | |
| Relative humidity | | |
| Operation | 5 to 95%, non-condensing | |
| Storage | 5 to 95%, non-condensing | |
| Transport | 5 to 95%, non-condensing | |
| Mechanical properties | | |
| Note | Order 1x terminal block X20TB06 or X20TB12 separately. Order 1x bus module X20BM11 separately. | |
| Pitch | 12.5 ^{+0.2} mm | |

Table 2: X20AO2632 - Technical data

- 1) At 25°C
- 2) Based on the current output value.
- 3) Based on the entire output range.

2.2 LED status indicators


For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" in the X20 system user's manual.

| Figure | LED | Color | Status | Description |
|---|-------|--------|--------------|--|
|  | r | Green | Off | No power to module |
| | | | Single flash | RESET mode |
| | | | Double flash | BOOT mode (during firmware update) ¹⁾ |
| | | | Blinking | PREOPERATIONAL mode |
| | e | Red | On | RUN mode |
| | | | Off | No power to module or everything OK |
| | 1 - 2 | Orange | On | Error or reset status |
| | | | Off | Value = 0 |
| | | | On | Value ≠ 0 |


- 1) Depending on the configuration, a firmware update can take up to several minutes.

2.3 Pinout


The individual channels can be configured for either current or voltage signals. The type of signal is also determined by the terminals used.

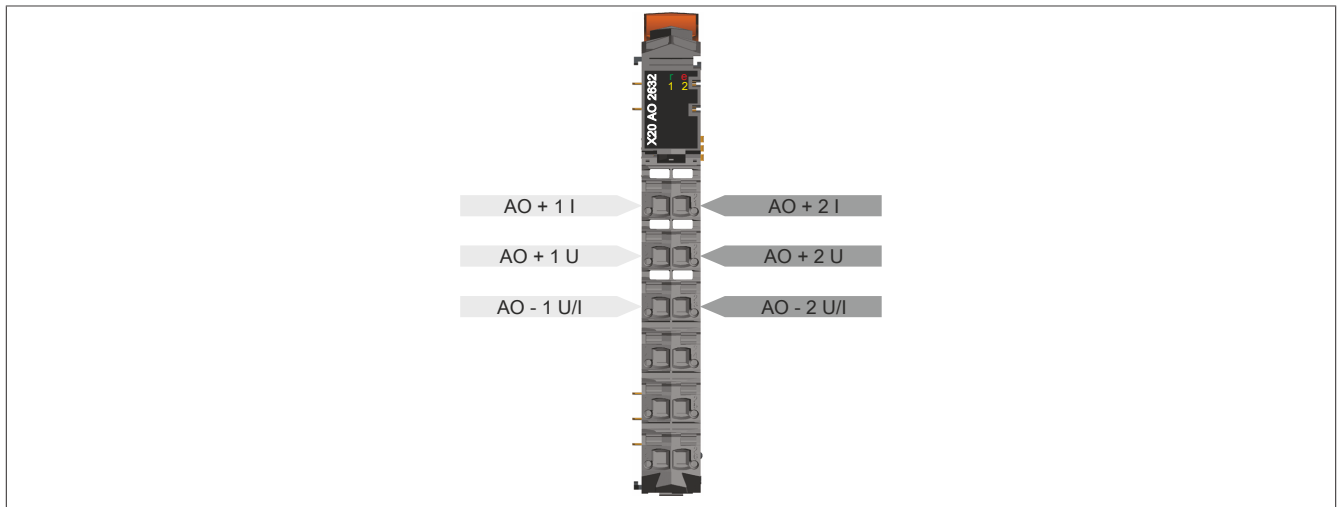

2.4 Connection example

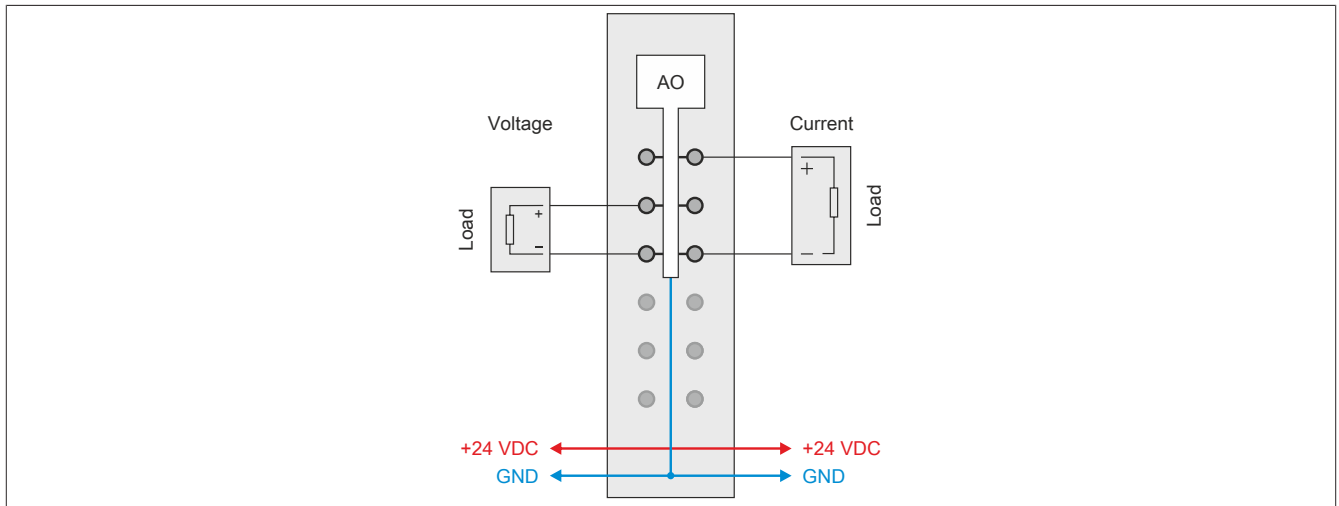

2.5 Output circuit diagram

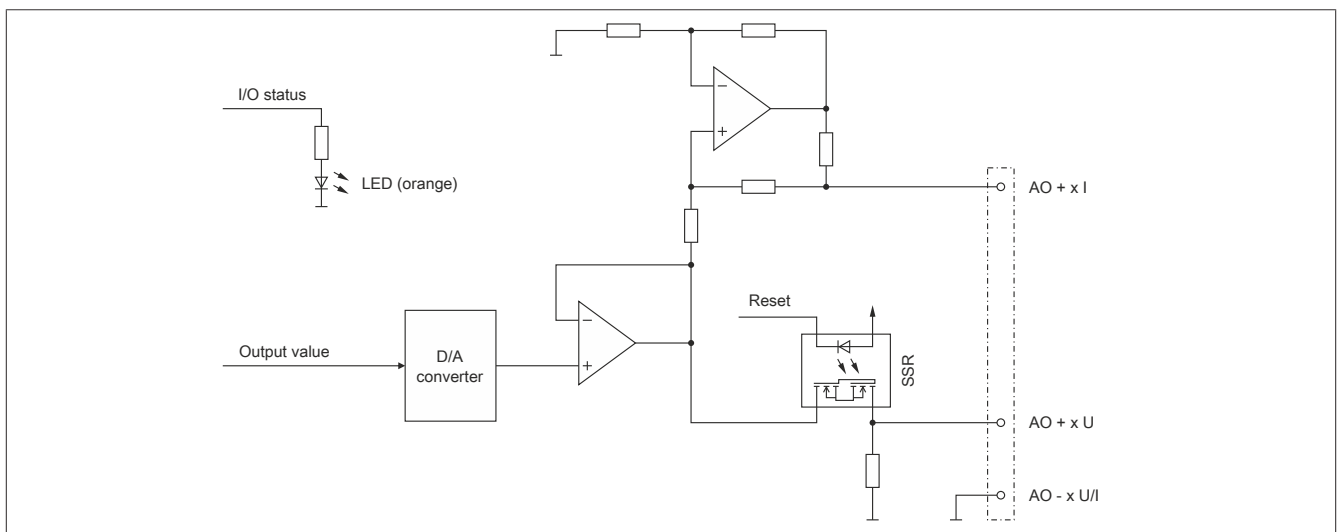

3 Function description

3.1 Analog outputs

The module is equipped with 2 analog outputs.

The individual channels are designed for current and voltage signals. The differentiation is made by different terminal connections; because of different adjustment values for current and voltage, the output signal must be selected. The following output signals can be set:

- ± 10 V voltage signal
- 0 to 20 mA current signal



Information:

The register is described in ["Setting the channel type" on page 13](#).

3.2 Time-controlled monitoring of the outputs

If the application requires time-controlled monitoring of the outputs, a validation timer can be assigned to each channel.

Options per channel:

- Validation timer data type: Basic selection 16 or 32 bits
- Validation window: The maximum permissible value can be further limited within the data type.
- Timer assignment: A separate timer is available for each channel. However, all channels can be configured with the same validation timer; the same settings for the data type and window must be made in the TimeMode registers.

The validation timer register assigns a validity period to the current output value. If validation is enabled, the module compares the validation time and the [NetTime](#) of the X2X Link. If the transmitted validity period is exceeded, the module switches off the channel and resets the output. State "Safety shutdown" is only exited again when a new valid validation time is transmitted. If enabled, the module reports its current state via the error status bit of the channel.

If the value of the validation timer is incremented in each task cycle, the valid validation time will be calculated as follows:

| NetTime of the X2X Link master (to which the module is connected) | |
|---|--|
| + | Time span for transferring data from the X2X Link master to the controller (higher-level system) |
| + | Cycle time of task class (including tolerance) |
| + | Time span for transferring data from the controller to the module |
| + | Time span allowed by the application, e.g. to tolerate the failure of an X2X Link cycle |
| = | Valid validation time |

The AnalogOutputEnableByte is enabled during time-based monitoring. If the timer expires prematurely, the corresponding bit in the AnalogOutputOkayByte is reset and the output drops out. This provides an easy way to achieve a defined state.



Information:

The registers are described in ["Configuring the time-based watchdog monitor" on page 13](#) and ["Analog output - Communication" on page 14](#).

3.3 NetTime Technology

NetTime refers to the ability to precisely synchronize and transfer system times between individual components of the controller or network (controller, I/O modules, X2X Link, POWERLINK, etc.).

This allows the moment that events occur to be determined system-wide with microsecond precision. Upcoming events can also be executed precisely at a specified moment.



3.3.1 Time information

Various time information is available in the controller or on the network:

- System time (on the PLC, Automation PC, etc.)
- X2X Link time (for each X2X Link network)
- POWERLINK time (for each POWERLINK network)
- Time data points of I/O modules

The NetTime is based on 32-bit counters, which are increased with microsecond resolution. The sign of the time information changes after 35 min, 47 s, 483 ms and 648 μ s; an overflow occurs after 71 min, 34 s, 967 ms and 296 μ s.


The initialization of the times is based on the system time during the startup of the X2X Link, the I/O modules or the POWERLINK interface.

Current time information in the application can also be determined via library AsIOTime.

3.3.1.1 Controller data points

The NetTime I/O data points of the controller are latched to each system clock and made available.


3.3.1.2 X2X Link - Reference time point

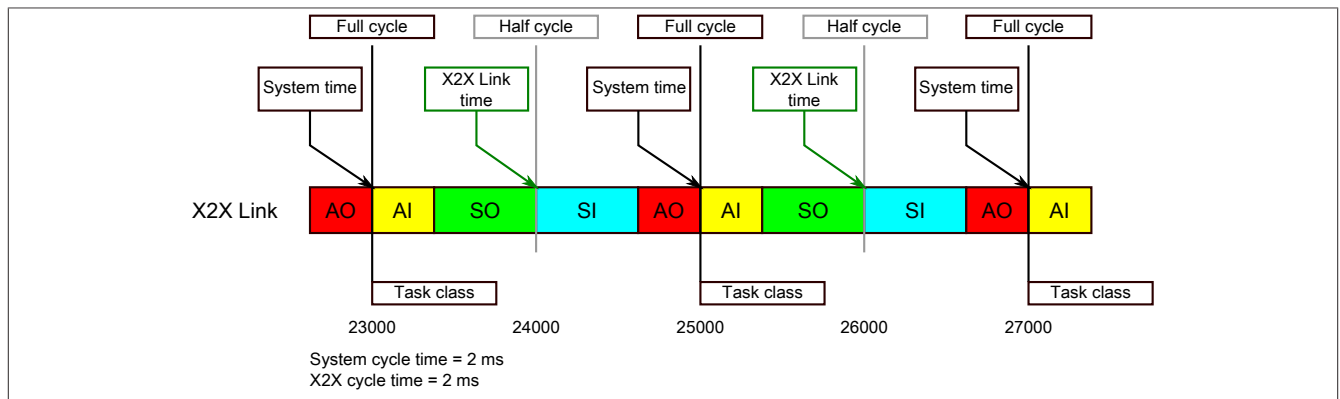

The reference time point on the X2X Link network is always calculated at the half cycle of the X2X Link cycle. This results in a difference between the system time and the X2X Link reference time point when the reference time is read out.

In the example above, this results in a difference of 1 ms, i.e. if the system time and X2X Link reference time are compared at time 25000 in the task, then the system time returns the value 25000 and the X2X Link reference time returns the value 24000.

3.3.1.3 POWERLINK - Reference time point

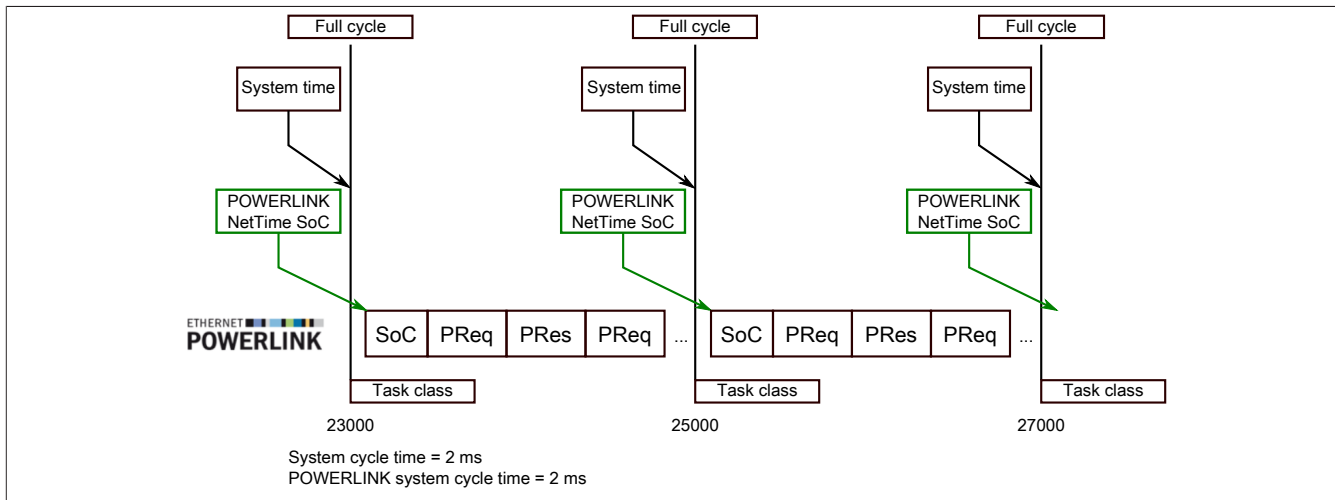


The POWERLINK reference time point is always calculated at the start of cycle (SoC) of the POWERLINK network. The SoC starts 20 μ s after the system clock due to the system. This results in the following difference between the system time and the POWERLINK reference time:

POWERLINK reference time = System time - POWERLINK cycle time + 20 μ s

In the example above, this means a difference of 1980 μ s, i.e. if the system time and POWERLINK reference time are compared at time 25000 in the task, then the system time returns the value 25000 and the POWERLINK reference time returns the value 23020.

3.3.1.4 Synchronization of system time/POWERLINK time and I/O module

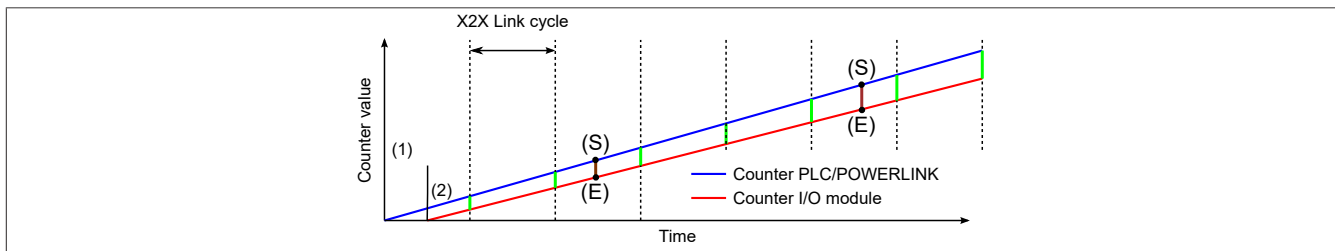

At startup, the internal counters for the controller/POWERLINK (1) and the I/O module (2) start at different times and increase the values with microsecond resolution.

At the beginning of each X2X Link cycle, the controller or POWERLINK network sends time information to the I/O module. The I/O module compares this time information with the module's internal time and forms a difference (green line) between the two times and stores it.

When a NetTime event (E) occurs, the internal module time is read out and corrected with the stored difference value (brown line). This means that the exact system moment (S) of an event can always be determined, even if the counters are not absolutely synchronous.

Note

The deviation from the clock signal is strongly exaggerated in the picture as a red line.

3.3.2 Timestamp functions

NetTime-capable modules provide various timestamp functions depending on the scope of functions. If a timestamp event occurs, the module immediately saves the current NetTime. After the respective data is transferred to the controller, including this precise moment, the controller can then evaluate the data using its own NetTime (or system time), if necessary.
For details, see the respective module documentation.

3.3.2.1 Time-based inputs

NetTime Technology can be used to determine the exact moment of a rising edge at an input. The rising and falling edges can also be detected and the duration between 2 events can be determined.



Information:

The determined moment always lies in the past.

3.3.2.2 Time-based outputs

NetTime Technology can be used to specify the exact moment of a rising edge on an output. The rising and falling edges can also be specified and a pulse pattern generated from them.



Information:

The specified time must always be in the future, and the set X2X Link cycle time must be taken into account for the definition of the moment.

3.3.2.3 Time-based measurements

NetTime Technology can be used to determine the exact moment of a measurement that has taken place. Both the starting and end moment of the measurement can be transmitted.

4 Commissioning

4.1 Using the module on the bus controller

Function model 254 "Bus controller" is used by default only by non-configurable bus controllers. All other bus controllers can use other registers and functions depending on the fieldbus used.

For detailed information, see section "Additional information - Using I/O modules on the bus controller" in the X20 user's manual (version 3.50 or later).

4.1.1 CAN I/O bus controller

The module occupies 1 analog logical slot on CAN I/O.

5 Register description

5.1 General data points

In addition to the registers described in the register description, the module has additional general data points. These are not module-specific but contain general information such as serial number and hardware variant.

General data points are described in section "Additional information - General data points" in the X20 System user's manual.

5.2 Function model 0 - Standard

| Register | Name | Data type | Read | | Write | |
|-------------------------------|--|-----------|--------|------------|--------|------------|
| | | | Cyclic | Non-cyclic | Cyclic | Non-cyclic |
| Analog output - Configuration | | | | | | |
| 0 | ConfigOutput01 (channel type) | UINT | | | | • |
| 594 | Cfo_Channel01TimeMode | UINT | | | | • |
| 598 | Cfo_Channel02TimeMode | | | | | |
| Analog output - Communication | | | | | | |
| 2 | AnalogOutput01 | INT | | | • | |
| 4 | AnalogOutput02 | | | | | |
| 457 | SDCLifeCount | SINT | • | | | |
| 802 | ValidationTimer01 | INT | | | • | |
| 810 | ValidationTimer02 | | | | | |
| 804 | ValidationTimer01 | DINT | | | • | |
| 812 | ValidationTimer02 | | | | | |
| 833 | Enabling/disabling the output channels | USINT | • | | • | |
| | AnalogOutput01Enable, ~Readback | Bit 0 | | | | |
| | AnalogOutput02Enable, ~Readback | Bit 1 | | | | |
| 835 | Checking the output values | USINT | • | | | |
| | AnalogOutput01OK | Bit 0 | | | | |
| | AnalogOutput02OK | Bit 1 | | | | |

5.3 Function model 254 - Bus controller

| Register | Offset ¹⁾ | Name | Data type | Read | | Write | |
|-------------------------------|----------------------|-------------------------------|-----------|--------|------------|--------|------------|
| | | | | Cyclic | Non-cyclic | Cyclic | Non-cyclic |
| Analog output - Configuration | | | | | | | |
| 0 | - | ConfigOutput01 (channel type) | UINT | | | | • |
| Analog output - Communication | | | | | | | |
| 2 | 0 | AnalogOutput01 | INT | | | • | |
| 4 | 2 | AnalogOutput02 | | | | | |

1) The offset specifies the position of the register within the CAN object.

5.4 Analog output - Configuration

The channels are configured independently of each other. Optionally, the user can define time-controlled monitoring.

5.4.1 Setting the channel type

Name:

ConfigOutput01

This register can be used to set the channel type of the outputs.

| Data type | Values | Bus controller default setting |
|-----------|------------------------|--------------------------------|
| UINT | See the bit structure. | 0 |

Bit structure:

| Bit | Description | Value | Information |
|---------|-------------|-------|---|
| 0 - 7 | Reserved | 0 | |
| 8 | Channel 1 | 0 | Voltage signal (bus controller default setting) |
| | | 1 | Current signal |
| 9 | Channel 2 | 0 | Voltage signal (bus controller default setting) |
| | | 1 | Current signal |
| 10 - 15 | Reserved | 0 | |

5.4.2 Configuring the time-based watchdog monitor

Name:

Cfo_Channel01TimeMode to Cfo_Channel02TimeMode

This register is used to enable or configure time-controlled monitoring of the analog output channels. For details, see ["Time-controlled monitoring of the outputs" on page 7](#).

| Data type | Values |
|-----------|------------------------|
| USINT | See the bit structure. |

Bit structure:

| Bit | Name | Value | Information |
|--------|----------------------|-------|---|
| 0 - 4 | Max. validation time | 00000 | Disabled |
| | | 00001 | 2 µs |
| | | 00010 | 4 µs |
| | | 00011 | 8 µs |
| | | ... | ... |
| | | 11111 | 2,147,483,648 µs (~35 min) |
| 5 - 7 | Reserved | 0 | |
| 8 | Timer allocation | 0 | ValidationTimer01 (default for channel 1) |
| | | 1 | ValidationTimer02 (default for channel 2) |
| 9 - 14 | Reserved | 0 | |
| 15 | Time format | 0 | 16-bit |
| | | 1 | 32-bit |

5.5 Analog output - Communication

5.5.1 Output values of the analog outputs

Name:

AnalogOutput01 to AnalogOutput02

The normalized output values are specified via these registers. After a permissible value is transferred, the module outputs the corresponding current or voltage.



Information:

The value "0" disables the channel status LED.

| Data type | Value | |
|-----------|-----------------|---------|
| INT | -32767 to 32767 | Voltage |
| | 0 to 32767 | Current |

5.5.2 SDC counter register

Name:

SDCLifeCount

The 8-bit counter register is needed for the SDC software package. It is incremented with the system clock to allow the SDC to check the validity of the data frame.

| Data type | Values |
|-----------|-------------|
| SINT | -128 to 127 |

5.5.3 Transfer of the timestamp

Name:

ValidationTimer01 to ValidationTimer02

When an output is being monitored, these registers must provide the timestamp which, when reached, will cause the output to shut down automatically. The values must be provided as signed 2-byte or 4-byte values.

For additional information about NetTime and timestamps, see ["NetTime Technology" on page 8](#).

| Data type | Values [µs] | |
|-----------|---------------------------------|---|
| INT | -32768 to 32767 | NetTime timestamp of the current output value |
| DINT | -2,147,483,648 to 2,147,483,647 | NetTime timestamp of the current output value |

5.5.4 Enabling/disabling the output channels

Name:

AnalogOutput01Enable to AnalogOutput02Enable

AnalogOutput01EnableReadback to AnalogOutput02EnableReadback

Byte "OutputEnable" is only needed for the channels with enabled time control. The individual bits are used to switch the respective channels on/off. In order to obtain reliable feedback about the current module state, the byte has been additionally implemented as cyclically readable.

| Data type | Value |
|-----------|-------------------|
| USINT | See bit structure |

Bit structure:

| Bit | Name | Value | Information |
|-------|------------------------------|-------|--------------------|
| 0 | AnalogOutput01Enable | 0 | Output deactivated |
| | AnalogOutput01EnableReadback | 1 | Output activated |
| 1 | AnalogOutput02Enable | 0 | Output deactivated |
| | AnalogOutput02EnableReadback | 1 | Output activated |
| 2 - 7 | Reserved | 0 | |

5.5.5 Checking the output values

Name:

AnalogOutput01OK to AnalogOutput02OK

These registers are only needed for channels with activated time-based monitoring. The individual bits report whether the respective channel is actually generating the required voltage or current.

| Data type | Value |
|-----------|-------------------|
| USINT | See bit structure |

Bit structure:

| Bit | Name | Value | Information |
|-------|------------------|-------|-------------------------------|
| 0 | AnalogOutput01OK | 0 | Electrical signal deactivated |
| | | 1 | Electrical signal activated |
| 1 | AnalogOutput02OK | 0 | Electrical signal deactivated |
| | | 1 | Electrical signal activated |
| 2 - 7 | Reserved | 0 | |

5.6 Minimum cycle time

The minimum cycle time specifies how far the bus cycle can be reduced without communication errors occurring. It is important to note that very fast cycles reduce the idle time available for handling monitoring, diagnostics and acyclic commands.

| Minimum cycle time |
|--------------------|
| 200 µs |

5.7 Minimum I/O update time

The minimum I/O update time specifies how far the bus cycle can be reduced so that an I/O update is performed in each cycle.

| Minimum I/O update time |
|-------------------------|
| 200 µs |