

X20BC00G3

Data sheet
1.28 (August 2025)



Publishing information

B&R Industrial Automation GmbH

B&R Strasse 1

5142 Eggelsberg

Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

Disclaimer

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1282159634699-1.28

1 General information

1.1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

Document name	Title
MAX20	X20 System user's manual

1.2 Order data


Order number	Short description	Figure
	Bus controllers	
X20BC00G3	X20 bus controller, 1 EtherCAT interface, 2x RJ45, order bus base, power supply module and terminal block separately!	
	Required accessories	
	System modules for bus controllers	
X20BB80	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20PS9400	X20 power supply module, for bus controller and internal I/O power supply X2X Link power supply	
X20PS9402	X20 power supply module, for bus controller and internal I/O power supply, X2X Link supply, supply not galvanically isolated	
	Terminal blocks	
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed	

Table 1: X20BC00G3 - Order data

1.3 Module description

The bus controller allows X2X Link I/O modules to be coupled to EtherCAT and operated on any EtherCAT master system. A transition between IP20 and IP67 protection outside of the control cabinet is possible by arranging X20, X67 or XV modules one after the other as needed at distances up to 100 m.

Master systems without FoE (File access over EtherCAT) support require an appropriate configuration tool to transfer the configuration (optional).

- Auto-configuration of I/O modules
- I/O configuration and firmware update via fieldbus (FoE)
- Full support of the modular slice concept via CANopen over EtherCAT (CoE)
- Synchronization between fieldbus and X2X Link

Functions:

- [EtherCAT](#)

EtherCAT

EtherCAT is an Ethernet-based fieldbus developed by Beckhoff. This protocol is suitable for both hard and soft real-time requirements in automation technology.

2 Technical description

2.1 Technical data

Order number	X20BC00G3
Short description	
Bus controller	EtherCAT slave
General information	
B&R ID code	0xAC23
Status indicators	Module status, bus function
Diagnostics	
Module status	Yes, using LED status indicator and software
Bus function	Yes, using LED status indicator and software
Power consumption	
Bus	1.68 W
Additional power dissipation caused by actuators (resistive) [W]	-
Certifications	
CE	Yes
UKCA	Yes
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÜ 09 ATEX 0083X
UL	cULus E115267 Industrial control equipment
HazLoc	cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5
KC	Yes
Interfaces	
Fieldbus	EtherCAT slave
Variant	2x shielded RJ45
Line length	Max. 100 m between 2 stations (segment length)
Transfer rate	100 Mbit/s
Transfer	
Physical layer	100BASE-TX
Half-duplex	Yes
Full-duplex	Yes
Autonegotiation	Yes
Auto-MDI/MDIX	Yes
Hub propagation delay	750 ns
Min. cycle time ¹⁾	
Fieldbus	200 µs
X2X Link	200 µs
Synchronization between bus systems possible	Yes
Electrical properties	
Electrical isolation	EtherCAT isolated from bus and I/O
Operating conditions	
Mounting orientation	
Horizontal	Yes
Vertical	Yes
Installation elevation above sea level	
0 to 2000 m	No limitation
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m
Degree of protection per EN 60529	IP20
Ambient conditions	
Temperature	
Operation	
Horizontal mounting orientation	0 to 55°C
Vertical mounting orientation	0 to 50°C
Derating	-
Storage	-25 to 70°C
Transport	-25 to 70°C


Table 2: X20BC00G3 - Technical data

Order number	X20BC00G3
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Mechanical properties	
Note	Order 1x terminal block X20TB12 separately. Order 1x power supply module X20PS9400 or X20PS9402 separately. Order 1x bus base X20BB80 separately.
Pitch ²⁾	37.5 ^{+0.2} mm

Table 2: X20BC00G3 - Technical data


- 1) The minimum cycle time specifies how far the bus cycle can be reduced without communication errors occurring.
- 2) Pitch is based on the width of bus base X20BB80. In addition, power supply module X20PS9400 or X20PS9402 is always required for the bus controller.

2.2 Operating and connection elements

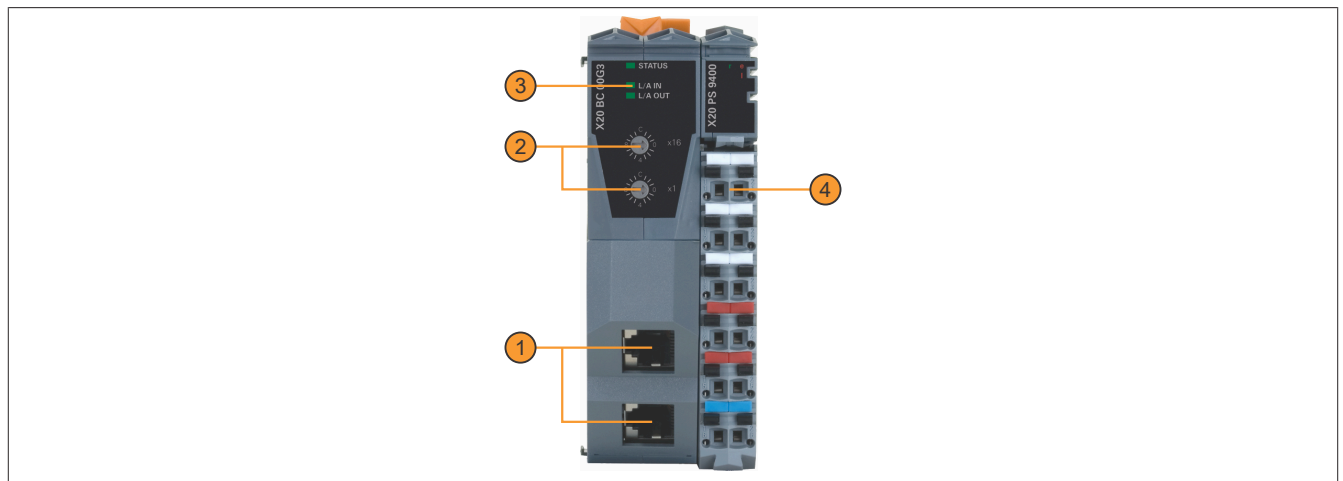


1	EtherCAT connection with 2x RJ45 for simple wiring	2	Network address switches
3	LED status indicators	4	Terminal block for bus controller and I/O supply

2.2.1 LED status indicators

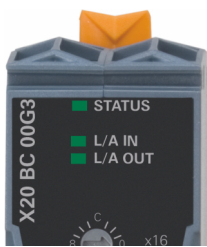Figure	LED	Color	Status	Description
	STATUS ¹⁾	Green	On	The bus controller is in state OPERATIONAL.
			Blinking	State PREOPERATIONAL
			Single flash	State SAFE-OPERATIONAL
			Flickering	The bus controller has started and is not yet in state INIT, or it is in state BOOTSTRAP (e.g. during firmware download).
			Off	State INIT
		Red	On	A critical communication or application error has occurred.
			Blinking	Invalid configuration data
			Single flash	The bus controller has an internal error and has changed the EtherCAT state on its own.
			Double flash	Watchdog timeout (process data watchdog or EtherCAT watchdog)
		L/A IN L/A OUT	Flickering	Error in startup procedure (state INIT achieved, but the error indicator bit in the AL status register is set)
			Off	No error
			Blinking	The respective LED blinks when Ethernet activity is taking place (PORT OPEN) on the corresponding RJ45 interface (IN, OUT).
		Green	On	A connection (link) is established, but no communication is taking place (PORT OPEN).
			Off	No physical Ethernet connection exists (PORT CLOSED).


1) LED "STATUS" is a green/red dual LED used to indicate EtherCAT states ERROR and RUN.


LED status indicators - Blink times

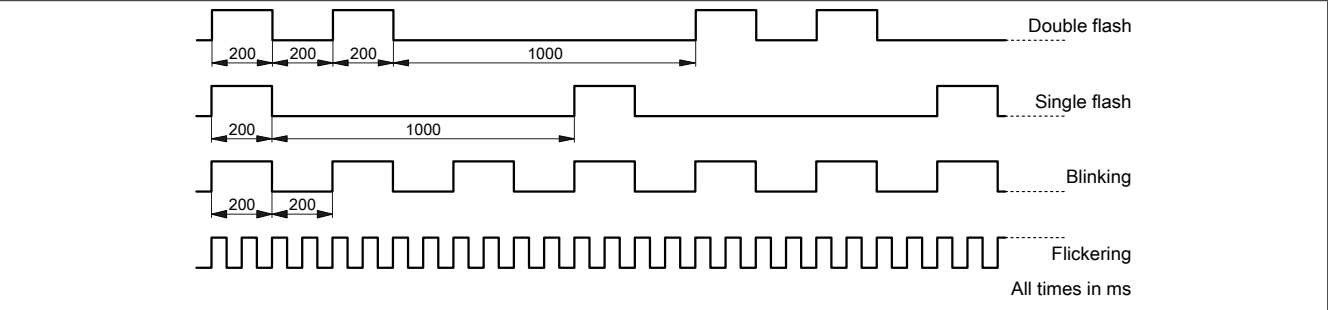


2.2.2 RJ45 ports

For information about wiring X20 modules with an Ethernet interface, see section "Mechanical and electrical configuration - Wiring guidelines for X20 modules with Ethernet cables" in the X20 user's manual.

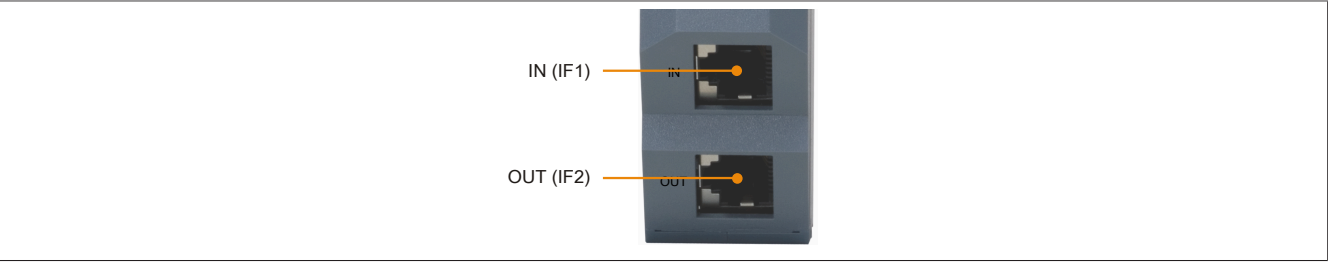

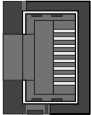Interface	Pinout		
	Pin	Ethernet	
 Shielded RJ45	1	TXD	Transmit data
	2	TXD\	Transmit data\
	3	RXD	Receive data
	4	Termination	
	5	Termination	
	6	RXD\	Receive data\
	7	Termination	
	8	Termination	

2.2.3 EtherCAT network address switches

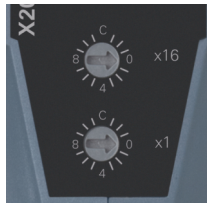

A slave alias address can be set using the 2 network address switches on the bus controller. During the initialization phase (during startup), the bus controller writes the value of the address switches to ESC register 0x12 or 0x13. However, this value is only applied in the corresponding registers if the switch value is between 0x00 and 0xFA (decimal 250).

Switch position	Description
0x00 to 0xFA	Writes the address switch value to the "Station alias" register.
0xFB to 0xFE	Does not apply the address switch value. ESC alias registers are not changed.
0xFF	Does not apply the address switch value. ESC alias registers are not changed. If the address switches are set to value 0xFF and the bus controller is restarted, then it will boot with the default values. All set parameters remain unchanged in flash memory.

The master determines whether the alias address is used to address the slave by setting the corresponding bit (bit 24) in the ESC DL control register.

3 Function description

3.1 EtherCAT

EtherCAT is an Ethernet-based fieldbus developed by Beckhoff. This protocol is suitable for both hard and soft real-time requirements in automation technology. In addition to a ring structure, which becomes logically necessary because of the summation frame telegram used, the EtherCAT technology also physically supports topologies such as line, tree, star (limited) and combinations of these topologies. B&R's X20BC80G3 (expandable bus controller module) and X20HB88G0 (standalone junction base module) are available for implementing these topologies.

EtherCAT slave devices take the data designated for them from a telegram as it is passing through the device. Input data is also added to the telegram as it is passing through.

Master systems without FoE (File access over EtherCAT) support require an appropriate configuration tool to transfer the configuration (optional).

For additional information, see the [EtherCAT bus controller user's manual](#).

3.2 Deleting parameters

Various parameters can be stored in the bus controller's flash memory. Deleting these parameters using switch position F0 returns the bus controller to its factory settings.

Deleting the parameters

1. Switch off the power supply to the bus controller.
2. Set the node number to F0.
3. Switch on the power supply to the bus controller.
4. Wait until LED "STATUS" flashes green.
5. Set the node number switch to 0 and then back to F0.
6. Wait until LED "STATUS" blinks (parameters have been deleted).
7. Switch the power supply to the bus controller off and then back on.
8. The bus controller boots with its default settings.

4 Commissioning



Information:

With multifunction modules, the bus controller supports only the default function model in the event of automatic configuration by the bus controller (see the respective module description).

All other function models are supported when configured accordingly in Automation Studio V4.3 or later.

Automation Studio can be downloaded at no cost from the B&R website (www.br-automation.com). The evaluation license is permitted to be used to create complete configurations for fieldbus bus controllers at no cost.