

# X20(c)PS9400

Data sheet  
3.20 (July 2025)



**Publishing information**

B&R Industrial Automation GmbH

B&R Strasse 1

5142 Eggelsberg

Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

[office@br-automation.com](mailto:office@br-automation.com)

**Disclaimer**

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1247782280484-3.20

# 1 General information

## 1.1 Other applicable documents

For additional and supplementary information, see the following documents.

### Other applicable documents

Document name	Title
MAX20	<a href="#">X20 System user's manual</a>

## 1.2 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation and corrosive gases.

The modules' electronics are fully compatible with the corresponding X20 modules.



For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, method 4, exposure 21 days



### 1.2.1 Starting temperature

The starting temperature describes the minimum permissible ambient temperature in a voltage-free state at the time the coated module is switched on. This is permitted to be as low as -40°C. During operation, the conditions as specified in the technical data continue to apply.



#### Information:

It is important to absolutely ensure that there is no forced cooling by air currents in the closed control cabinet, e.g. due to the use of a fan or ventilation slots.

## 1.3 Order data


Order number	Short description	Figure
<b>System modules for bus controllers</b>		
X20PS9400	X20 power supply module, for bus controller and internal I/O power supply X2X Link power supply	
X20cPS9400	X20 power supply module, coated, for bus controller and internal I/O power supply X2X Link power supply	
<b>Required accessories</b>		
<b>System modules for bus controllers</b>		
X20BB80	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20cBB80	X20 bus base, coated, for X20 base module (BC, HB, etc.) and X20 power supply module, X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
<b>System modules for expandable bus controllers</b>		
X20BB81	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, with one expansion slot for X20 add-on module (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20BB82	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, with 2 expansion slots for 2 X20 add-on modules (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20cBB81	X20 bus base, coated, for X20 base module (BC, HB, etc.) and X20 power supply module, with one expansion slot for X20 add-on module (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20cBB82	X20 bus base, coated, for X20 base module (BC, HB, etc.) and X20 power supply module, with 2 expansion slots for 2 X20 add-on modules (IF, HB, etc.), X20 end cover plates (left and right) X20AC0SL1/X20AC0SR1 included	
<b>Terminal blocks</b>		
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed	

Table 1: X20PS9400, X20cPS9400 - Order data

## 1.4 Module description

The supply module is used together with an X20 bus controller. It is equipped with a feed for the bus controller, the X2X Link and the internal I/O supply.

- Supply for the bus controller, X2X Link and internal I/O supply
- Feed and bus controller / X2X Link supply electrically isolated
- Redundancy of bus controller / X2X Link supply possible by operating multiple supply modules simultaneously
- Service interface (RS232)

Functions:

- [Monitoring the operating limits](#)

### Monitoring operating limits

The voltage of the I/O power supply is monitored for voltage overshoot or undershoot.

## 2 Technical description

### 2.1 Technical data

Order number	X20PS9400		X20cPS9400
Short description			
Power supply module	24 VDC supply module for bus controller, X2X Link power supply and I/O		
Interfaces	1x RS232 service interface		
General information			
B&R ID code	0x1F8C		0xD579
Status indicators	Overload, operating status, module status, RS232		
Diagnostics			
Module run/error	Yes, using LED status indicator and software		
RS232 data transfer	Yes, using LED status indicator		
Overload	Yes, using LED status indicator and software		
Power consumption for X2X Link power supply <sup>1)</sup>	1.42 W		
Power consumption <sup>1)</sup>			
Internal I/O	0.6 W		
Additional power dissipation caused by actuators (resistive) [W]	-		
Certifications			
CE	Yes		
UKCA	Yes		
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÚ 09 ATEX 0083X		
UL	cULus E115267 Industrial control equipment		
HazLoc	cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5		
DNV	Temperature: <b>B</b> (0 to 55°C) Humidity: <b>B</b> (up to 100%) Vibration: <b>B</b> (4 g) EMC: <b>B</b> (bridge and open deck)		
CCS	Yes	-	
LR	ENV1		
KR	Yes		
ABS	Yes		
BV	<b>EC33B</b> Temperature: 5 - 55°C Vibration: 4 g EMC: Bridge and open deck		
KC	Yes	-	
Bus controller / X2X Link power supply input			
Input voltage	24 VDC -15% / +20%		
Input current	Max. 0.7 A		
Fuse	Integrated, cannot be replaced		
Reverse polarity protection	Yes		
Bus controller / X2X Link power supply output			
Nominal output power	7 W		
Parallel connection	Yes <sup>2)</sup>	Yes <sup>3)</sup>	
Redundant operation	Yes		
Overload characteristics	Short-circuit proof, temporary overload		
Input I/O power supply			
Input voltage	24 VDC -15% / +20%		
Fuse	Required line fuse: Max. 10 A, slow-blow		
Reverse polarity protection	No		
Output I/O power supply			
Nominal output voltage	24 VDC		
Behavior on short circuit	Required line fuse		
Permissible contact load	10 A		
Interfaces			
Service interface			
Signal	RS232		
Variant	Connection made using 12-pin terminal block X20TB12	Connection via 12-pin terminal block X20TB12	
Max. transfer rate	115.2 kbit/s		

Table 2: X20PS9400, X20cPS9400 - Technical data

## Technical description

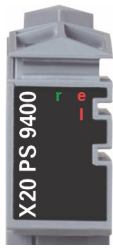
Order number	X20PS9400	X20cPS9400
Electrical properties		
Electrical isolation	BC/X2X Link supply isolated from BC/X2X Link power supply I/O supply not isolated from I/O power supply, and RS232 not isolated from bus	
Operating conditions		
Mounting orientation		
Horizontal	Yes	
Vertical	Yes	
Installation elevation above sea level		
0 to 2000 m	No limitation	
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m	
Degree of protection per EN 60529	IP20	
Ambient conditions		
Temperature		
Operation		
Horizontal mounting orientation	-25 to 60°C	
Vertical mounting orientation	-25 to 50°C	
Derating	See section "Derating".	
Starting temperature	-	Yes, -40°C
Storage	-40 to 85°C	
Transport	-40 to 85°C	
Relative humidity		
Operation	5 to 95%, non-condensing	Up to 100%, condensing
Storage	5 to 95%, non-condensing	
Transport	5 to 95%, non-condensing	
Mechanical properties		
Note	Order 1x terminal block X20TB12 separately. Order 1x bus base X20BB8x separately.	Order 1x terminal block X20TB12 separately. Order 1x bus base X20cBB8x separately.
Pitch	12.5 <sup>+0.2</sup> mm	

Table 2: X20PS9400, X20cPS9400 - Technical data


- 1) The specified values are maximum values. For examples of the exact calculation, see section "Mechanical and electrical configuration" of the X20 system user's manual.
- 2) In parallel operation, it is only permitted to expect 75% of the nominal power. It is important to make sure that all power supplies operated in parallel are switched on and off at the same time.
- 3) In parallel operation, it is only permitted to expect 75% of the nominal power. It is important to make sure that all power supply units operated in parallel are switched on and off at the same time.

## 2.2 LED status indicators

For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" in the X20 system user's manual.


Figure	LED	Color	Status	Description
	r	Green	Off	No power to module
			Single flash	RESET mode
			Blinking	PREOPERATIONAL mode
			On	RUN mode
	e	Red	Off	No power to module or everything OK
			Double flash	LED indicates one of the following states: <ul style="list-style-type: none"> <li>• The bus controller / X2X Link power supply of the power supply unit is overloaded (&gt;2.3 A).</li> <li>• I/O supply too low</li> <li>• Input voltage for bus controller / X2X Link supply too low</li> </ul>
	e + r	Red on / Green single flash		Invalid firmware
	l	Red	Off	The bus controller / X2X Link supply is within the valid limits
			On	The bus controller / X2X Link power supply of the power supply unit is overloaded (>1.5 A).

## 2.3 Pinout

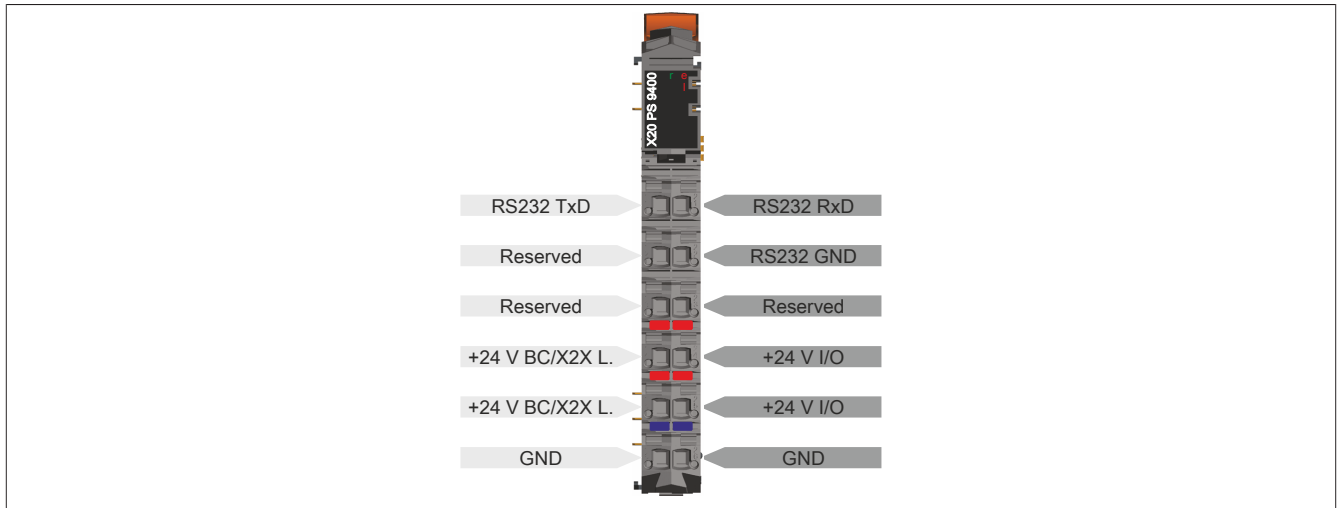

## 2.4 Connection examples


### With 2 isolated power supplies

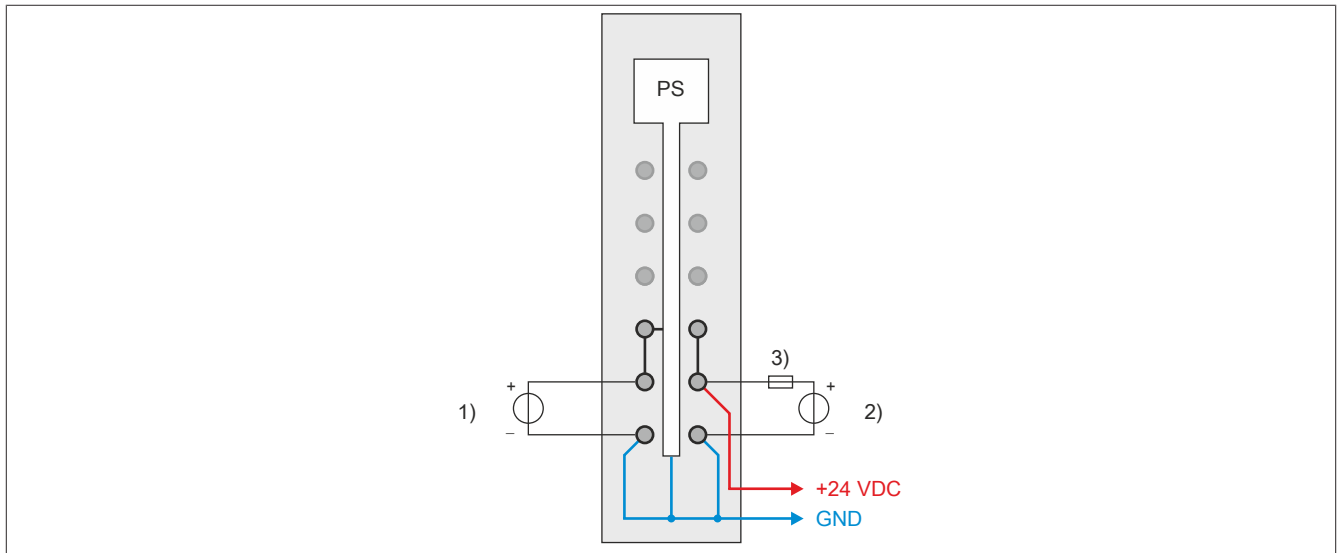

- 1) Supply for the bus controller or X2X Link power supply
- 2) Supply for the I/O power supply
- 3) Fuse, 10 A slow-blow

## Technical description


### With 1 power supply and jumper

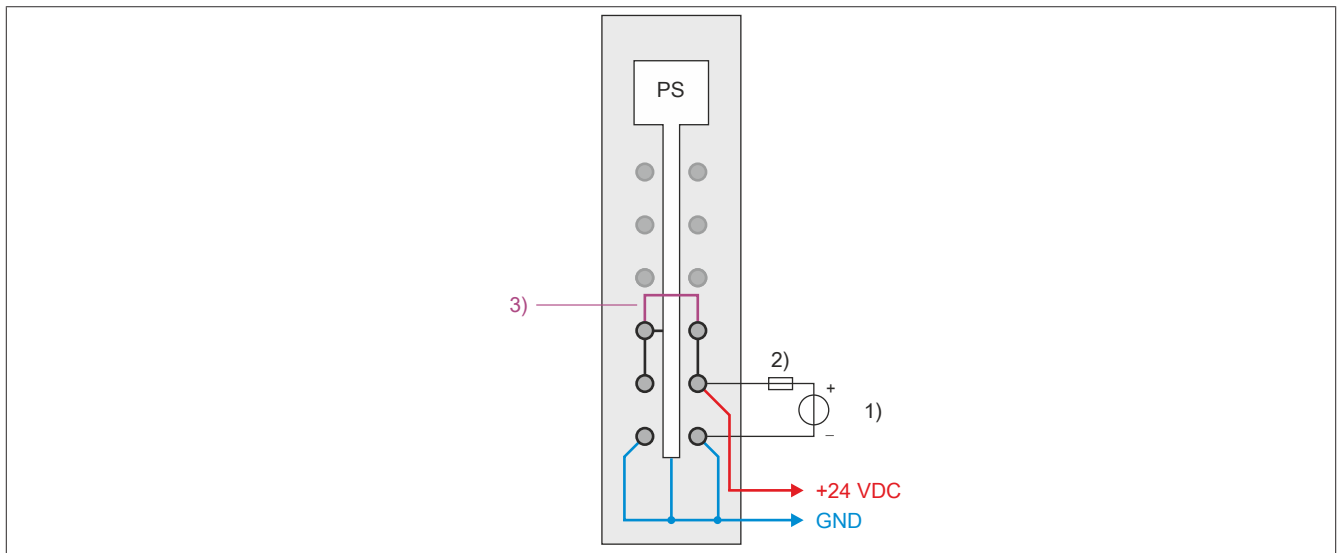

- 1) Supply for the I/O power supply
- 2) Fuse, 10 A slow-blow
- 3) Jumper

## 2.5 Derating

The nominal output power for the power supply is 7 W. Depending on the mounting orientation, derating must be taken into account.

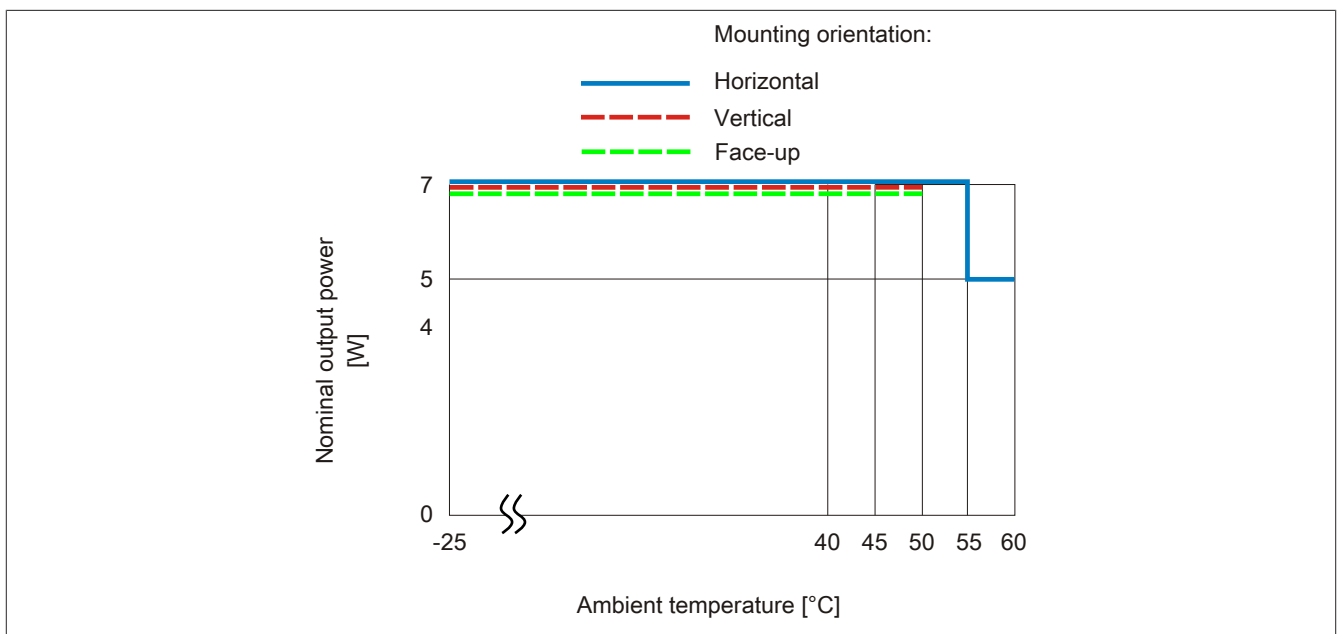

## 2.6 Using the service interface

The RS232 service interface cannot be used for application purposes. It is only intended for upgrading the firmware of various bus controllers and X2X modules and for storing configurations.



## 3 Function description

---

### 3.1 Monitoring the operating limits

The status of the bus supply voltage and the bus current can be read out.

Bit	Description
0	No error
1	Warning for overcurrent (>2.3 A) or undervoltage

The status of the I/O supply voltage can be read out.

Bit	Description
0	Supply voltage OK
1	Supply voltage outside the valid range



#### Information:

The register is described in ["Status of the module" on page 11](#).

## 4 Commissioning

---

### 4.1 Using the module on the bus controller

Function model 254 "Bus controller" is used by default only by non-configurable bus controllers. All other bus controllers can use other registers and functions depending on the fieldbus used.

For detailed information, see section "Additional information - Using I/O modules on the bus controller" in the X20 user's manual (version 3.50 or later).

#### 4.1.1 CAN I/O bus controller

The module occupies 1 analog logical slot on CAN I/O.

## 5 Register description

### 5.1 General data points

In addition to the registers described in the register description, the module has additional general data points. These are not module-specific but contain general information such as serial number and hardware variant.

General data points are described in section "Additional information - General data points" in the X20 System user's manual.

### 5.2 Function model 0 - Standard

Register	Fixed offset	Name	Data type	Read		Write	
				Cyclic	Acyclic	Cyclic	Acyclic
0	1	Status of the module	USINT	•			
		StatusInput01	Bit 0				
		StatusInput02	Bit 2				
2	2	SupplyCurrent	USINT	•			
4	3	SupplyVoltage	USINT	•			

Fixed modules require their data points to be in a specific order in the X2X frame. Cyclic access occurs according to a predefined offset, not based on the register address.

Acyclic access continues to be based on the register numbers.

### 5.3 Function model 254 - Bus controller

Register	Offset <sup>1)</sup>	Name	Data type	Read		Write	
				Cyclic	Acyclic	Cyclic	Acyclic
0	0	Status of the module	UINT	•			
		StatusInput01	Bit 0				
		StatusInput02	Bit 2				
2	2	SupplyCurrent	UINT	•			
4	4	SupplyVoltage	UINT	•			

1) The offset specifies the position of the register within the CAN object.

### 5.4 Status of the module

Name:

Module status

The following voltage and current states of the module are monitored in this register:

Function model	Data type	Values
0 - Standard	USINT	See the bit structure.
254 - Bus controller	UINT	See the bit structure.

Bit structure:

Bit	Name	Value	Information
0	StatusInput01	0	No error
		1	Warning for overcurrent (>2.3 A) or undervoltage
1	Reserved	0	
2	StatusInput02	0	Supply voltage OK
		1	Supply voltage outside the valid range
3 - x	Reserved	0	

## 5.5 Bus power supply current

Name:

SupplyCurrent

This register indicates the bus supply current with a resolution of 0.1 A.

Function model	Data type
0 - Standard	USINT
254 - Bus controller	UINT

## 5.6 Bus supply voltage

Name:

SupplyVoltage

This register indicates the measured bus supply voltage with a resolution of 0.1 V.



### Information:

The nominal bus supply voltage is 5 V and should not fall below 4.7 V.

Function model	Data type
0 - Standard	USINT
254 - Bus controller	UINT

## 5.7 Minimum cycle time

The minimum cycle time specifies how far the bus cycle can be reduced without communication errors occurring. It is important to note that very fast cycles reduce the idle time available for handling monitoring, diagnostics and acyclic commands.

Minimum cycle time
100 µs

## 5.8 Minimum I/O update time

The minimum I/O update time specifies how far the bus cycle can be reduced so that an I/O update is performed in each cycle.

Minimum I/O update time
2 ms